


Control module NIBE SMO 20



Quick guide


Navigation

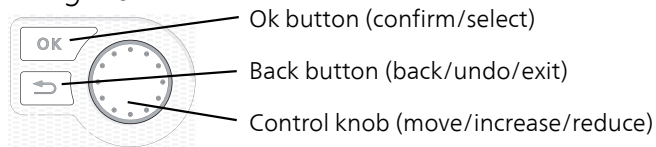

A detailed explanation of the button functions can be found on page 31.

How to scroll through menus and make different settings is described on page 33.

Set the indoor climate

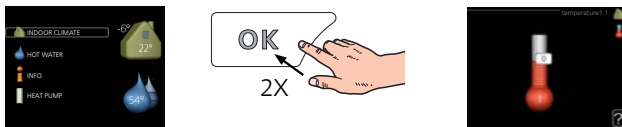

The mode for setting the indoor temperature is accessed by pressing the OK button twice, when in the start mode in the main menu.

Increase hot water volume



To temporarily increase the amount of hot water (if a hot water heater is installed to your SMO 20), first turn the control knob to mark menu 2 (water droplet) and then press the OK button twice.

Table of Contents

1	<i>Important information</i>	4	Cooling mode	29
	Safety information	4	Start-up and inspection	30
	Symbols	4		
	Marking	4	7 <i>Control - Introduction</i>	31
	Serial number	5	Display unit	31
	Recovery	5	Menu system	32
	Inspection of the installation	6	8 <i>Control</i>	35
	System solutions	7	Menu 1 - INDOOR CLIMATE	35
2	<i>Delivery and handling</i>	9	Menu 2 - HOT WATER	36
	Wall installation	9	Menu 3 - INFO	36
	Supplied components	9	Menu 4 - MY SYSTEM	37
			Menu 5 - SERVICE	38
3	<i>The Control Module Design</i>	10	9 <i>Service</i>	43
	Component positions	10	Service actions	43
	Electrical components	10	10 <i>Disturbances in comfort</i>	46
4	<i>Pipe connections</i>	11	Info-menu	46
	General	11	Manage alarm	46
	Compatible NIBE air/water heat pumps	12	Additional heating only	48
	Symbol key	12	11 <i>Accessories</i>	49
	Temperature sensor installation on pipe	13	12 <i>Technical data</i>	51
	Fixed condensing	13	Dimensions	51
	Docking alternatives	13	Technical specifications	52
			Energy labelling	53
5	<i>Electrical connections</i>	17	Electrical circuit diagram	54
	General	17	<i>Item register</i>	60
	Accessibility, electrical connection	18	<i>Contact information</i>	63
	Cable lock	19		
	Connections	20		
	Optional connections	24		
	Connecting accessories	28		
6	<i>Commissioning and adjusting</i>	29		
	Preparations	29		
	Commissioning	29		
	Commissioning with additional heating only	29		
	Check the reversing valve	29		
	Check AUX socket	29		

1 Important information

Safety information

This manual describes installation and service procedures for implementation by specialists.

The manual must be left with the customer.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Rights to make any design or technical modifications are reserved.

©NIBE 2019.

SMO 20 must be installed via an isolator switch. The cable area has to be dimensioned based on the fuse rating used.

If the supply cable is damaged, only NIBE, its service representative or similar authorised person may replace it to prevent any danger and damage.

Symbols



NOTE

This symbol indicates danger to person or machine .



Caution

This symbol indicates important information about what you should consider when installing or servicing the installation.



TIP

This symbol indicates tips on how to facilitate using the product.

Marking

CE The CE mark is obligatory for most products sold in the EU, regardless of where they are made.

IP21 Classification of enclosure of electro-technical equipment.



Danger to person or machine.



Read the User Manual.

Serial number

The serial number can be found on the top of the cover for the control module and in the info menu (menu 3.1).

Serial number



Caution

You need the product's (14 digit) serial number for servicing and support.

Recovery



Leave the disposal of the packaging to the installer who installed the product or to special waste stations.

Do not dispose of used products with normal household waste. It must be disposed of at a special waste station or dealer who provides this type of service.

Improper disposal of the product by the user results in administrative penalties in accordance with current legislation.

Inspection of the installation



 



 

Current regulations require the heating installation to be inspected before it is commissioned. The inspection must be carried out by a suitably qualified person. In addition, fill in the page for the installation data in the User Manual.

✓	Description	Notes	Signature	Date
	Electrical connections			
	Communication, heat pump			
	Connected supply 230 V			
	Outside sensor			
	Temperature sensor, hot water charging			
	Temperature sensor, hot water top			
	Temperature sensor, external flow line			
	Temperature sensor, external supply line after electric heater			
	Temperature sensor, external return line			
	Charge pump			
	Shuttle valve			
	AUX1			
	AUX2			
	AUX3			
	AUX4			
	AUX5			
	AUX6			
	AA2-X4			
	Miscellaneous			
	Checking additional heater			
	Checking the function of the reversing valve			
	Checking charge pump function			
	Completed installation check of heat pump and associated equipment			

System solutions

COMPATIBLE PRODUCTS

The following combinations of products are recommended for control by SMO 20.

							
<i>Control module</i>	<i>Air/water heat pump</i>	<i>HW control</i>	<i>Accumulator with hot water heater</i>	<i>Circ. pump</i>	<i>Water heater</i>	<i>Addition</i>	<i>Volume vessel</i>
SMO 20	AMS 10-6 / HBS 05-6	VST 05	VPA 450/300 VPAS 300/450 VPA 300/200 VPA 450/300 VPAS 300/450	CPD 11-25/65 CPD 11-25/75	VPB 200 VPB 300 VPBS 300 VPB 500 VPB 750-2 VPB 1000	ELK 15 ELK 26 ELK 42	UKV 40 UKV 100 UKV 200 UKV 300 UKV 500
	AMS 10-8 / HBS 05-12						
	F2040 – 6						
	F2040 – 8						
	F2120 – 8						
	AMS 10-12 / HBS 05-12	VST 11					
	F2040 – 12						
	F2120 – 12						
	F2120 – 16						
	AMS 10-16 / HBS 05-16	VST 20					
	F2040 – 16						
	F2120 – 20						
F2120 – 20							

COMPATIBLE AIR/WATER HEAT PUMPS

NIBE SPLIT HBS 05

AMS 10-6

Part no. 064 205

HBS 05-6

Part no. 067 578

AMS 10-8

Part no. 064 033

HBS 05-12

Part no. 067 480

AMS 10-12

Part no. 064 110

HBS 05-12

Part no. 067 480

AMS 10-16

Part no. 064 035

HBS 05-16

Part no. 067 536

F2040

F2040-6

Part no. 064 206

F2040-8

Part no. 064 109

F2040-12

Part no. 064 092

F2040-16

Part no. 064 108

F2120

F2120-8 1x230V

Part no. 064 134

F2120-8 3x400V

Part no. 064 135

F2120-12 1x230V

Part no. 064 136

F2120-12 3x400V

Part no. 064 137

F2120-16 3x400V

Part no. 064 139

F2120-20 3x400V

Part no. 064 141

Check the software version of compatible older NIBE air/water heat pumps, see page 12.


2 Delivery and handling

Wall installation



NOTE

For wall mounting, use screws suitable for the surface.

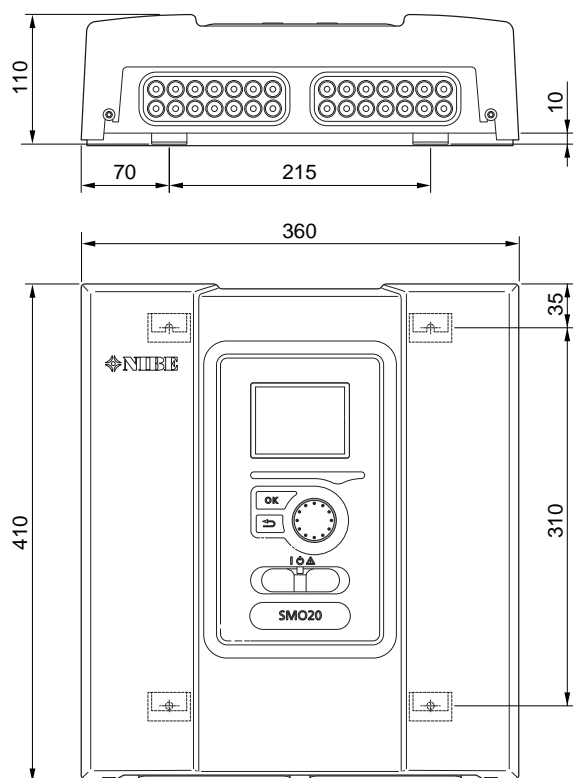

Use all mounting points and install SMO 20 upright flat against the wall without any part of the control module protruding beyond the edge of the wall.

Leave at least 100 mm free space around the control module to facilitate access and cable routing on installation and service.



Caution

Screws for removing the front cover are reached from underneath.

 
Supplied components



Outside sensor




Heating pipe paste



Insulation tape



Temperature sensor

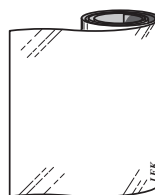


Aluminium tape




Cable ties

3 The Control Module Design

Component positions Electrical components

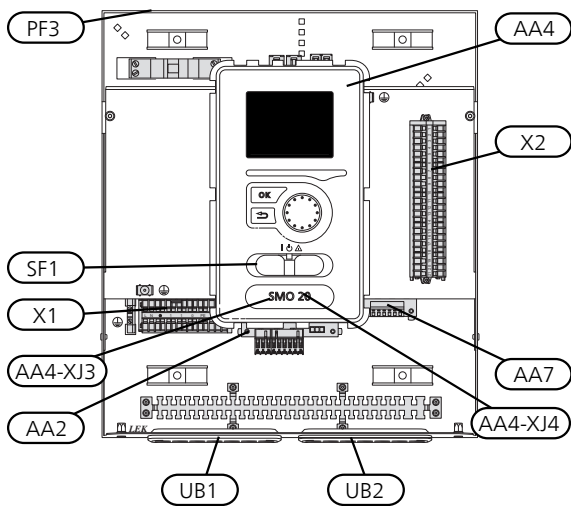

- AA2 Base card
- AA4 Display unit
 - AA4-XJ3 USB socket
 - AA4-XJ4 Service outlet (No function)
- AA7 Extra relay circuit board
- FA1 Miniature circuit breaker, 10 A
- X1 Terminal block, incoming electrical supply
- X2 Terminal block, control signal circulation pump, sensors AUX inputs and heat pump
- SF1 Switch
- PF3 Serial number plate
- UB1 Cable grommet, incoming supply electricity, power for accessories
- UB2 Cable gland, signal

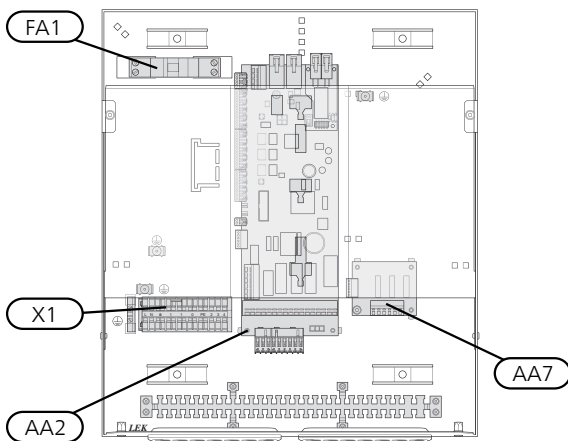

Designations in component locations according to standard IEC 81346-1 and EN 81346-2.

4 Pipe connections

General

Pipe installation must be carried out in accordance with applicable regulations. See manual for compatible NIBE air/water heat pump for installation of the heat pump.

The pipe dimension should not be less than the recommended pipe diameter according to the table below. However, each system must be dimensioned individually to achieve the recommended system flows.

MINIMUM SYSTEM FLOWS

The installation must be dimensioned at least to manage the minimum defrosting flow at 100% pump operation, see table.

<i>Air/water heat pump</i>	<i>Minimum flow during defrosting (100% pump speed (l/s))</i>	<i>Minimum recommended pipe dimension (DN)</i>	<i>Minimum recommended pipe dimension (mm)</i>
HBS 05-6/AMS 10-6	0.19	20	22
HBS 05-12/AMS 10-8	0.19	20	22
HBS 05-12/AMS 10-12	0.29	20	22
HBS 05-16/AMS 10-16	0.39	25	28

<i>Air/water heat pump</i>	<i>Minimum flow during defrosting (100% pump speed (l/s))</i>	<i>Minimum recommended pipe dimension (DN)</i>	<i>Minimum recommended pipe dimension (mm)</i>
F2120-8	0.27	20	22
F2120-8 (1x230V)	0.27	20	22
F2120-12	0.35	25	28
F2120-12 (1x230V)	0.35	25	28
F2120-16	0.38	25	28
F2120-20	0.38	32	35

<i>Air/water heat pump</i>	<i>Minimum flow during defrosting (100% pump speed (l/s))</i>	<i>Minimum recommended pipe dimension (DN)</i>	<i>Minimum recommended pipe dimension (mm)</i>
F2040-6	0.19	20	22
F2040-8	0.19	20	22
F2040-12	0.29	20	22
F2040-16	0.39	25	28



NOTE


















An undersized system can result in damage to the machine and lead to malfunctions.

Compatible NIBE air/water heat pumps


Compatible NIBE air/water heat pump has to be equipped with a control board that, as a minimum, has the software version given in the following list. The control board's version is shown in the heat pump's display (if applicable) at start-up.

<i>Product</i>	<i>Software version</i>
F2015	55
F2016	55
F2020	118
F2025	55
F2026	55
F2030	all versions
F2040	all versions
F2120	all versions
F2300	55
NIBE SPLIT HBS 05: AMS 10-6 + HBS 05-6 AMS 10-8 + HBS 05-12 AMS 10-12 + HBS 05-12 AMS 10-16 + HBS 05-16	all versions

Symbol key

<i>Symbol</i>	<i>Meaning</i>
	Shut-off valve
	Tapping valve
	Trim valve
	Shunt / reversing valve
	Safety valve
	Temperature sensor
	Expansion vessel
	Pressure gauge
	Circulation pump
	Particle filter
	Auxiliary relay
	Compressor
	Heat exchanger
	Radiator system
	Domestic hot water
	Under floor heating systems
	Cooling system

Temperature sensor installation on pipe

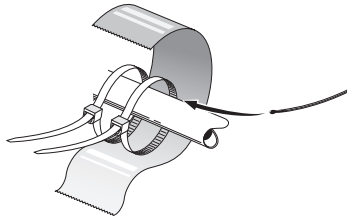

The temperature sensors are fitted using heat conducting paste, cable ties (the first cable tie is secured to the pipe in the middle of the sensor and the other cable tie is mounted approx. 5 cm after the sensor) and aluminium tape. Then insulate them using the enclosed insulation tape.



NOTE

Sensor and communication cables must not be laid near power cables.

Fixed condensing

If SMO 20 is to control the air/water heat pump in relation to the water heater with fixed condensing, you must connect an external supply temperature sensor (BT25), according to the description on page 23. Place the sensor in a suitable location in the tank. In addition, you must perform the following menu settings.

Menu	Menu setting (local variations may be required)
1.9.3.1 - min. flow line temp. heating	Desired temperature in the tank.
5.1.2 - max flow line temperature	Desired temperature in the tank.
5.11.1.2 - charge pump (GP12)	intermittent
4.2 - op. mode	manual

Docking alternatives

SMO 20 can be connected with other products from NIBE in several different ways, some of which are shown below (accessories may be required).

Further option information is available at nibe.eu and in the respective assembly instructions for the accessories used. See page 49 for a list of the accessories that can be used with SMO 20.

Installations with SMO 20 can produce heating and hot water. Cooling can also be produced, depending on which heat pump is used.

On cold days of the year when the access to energy from the air is reduced the additional heating can compensate and help to produce heat. The additional heating is also good to have as assistance if the heat pump ends up outside its working range or if it has been blocked for any reason.



NOTE

The heating medium side and the domestic hot water side must be fitted with the necessary safety equipment in accordance with the applicable regulations.

This is the outline diagram. Actual installations must be planned according to applicable standards.

EXPLANATION

AA25	SMO 20
BT1	Outdoor sensor ¹⁾
BT6	Temperature sensor, hot water charging ¹⁾
BT7	Temperature sensor, hot water top ¹⁾
BT25	Temperature sensor, external supply line ¹⁾
BT50	Room sensor
BT63	Temperature sensor, external supply line after electric heater
BT71	Temperature sensor, external return line ¹⁾
GP10	Circulation pump, Heating medium
QN10	Reversing valve, Hot water/Heating medium ²⁾

<i>EB1</i>	<i>Additional heat</i>
KA1	Auxiliary relay/Contactor

<i>EB101</i>	<i>Heat pump system</i>
BT3	Temperature sensor, return line ³⁾
BT12	Temperature sensor, condenser supply line ³⁾
EB101	Heat pump
FL10	Safety valve
GP12	Charge pump ²⁾
QM1	Drain valve, Heating medium
QM31	Shut-off valve, Heating medium, Flow
QM32	Shut off valve, Heating medium, Return
QZ2	Filterball

<i>EP21</i>	<i>Climate system 2</i>
-------------	-------------------------

<i>EQ1</i>	<i>Cooling system</i>
BT64	Temperature sensor, cooling supply line ²⁾
CP6	Single jacket accumulator tank, cooling
GP13	Circulation pump, cooling
QN12	Reversing valve, Cooling/Heating ²⁾

Miscellaneous

CM1	Expansion vessel closed, Heating medium
CP5	Buffer vessel (UKV)
CP10	Accumulator tank with hot water heating
EB20	Immersion heater
FL2	Safety valve, Heating medium
KA1	Auxiliary relay/Contactor
RM1	Non-return valve
RN10	Trim valve


1) Included in and supplied SMO 20

2) Included in and supplied accessory

3) Included in and supplied NIBE heat pump (can vary depending on heat pump).

Designations according to standard IEC 61346 and EN81346-2.

COMPATIBLE NIBE AIR/WATER HEAT PUMP TOGETHER WITH SMO 20 – DOCKING STEP-CONTROLLED ADDITIONAL HEAT BEFORE THE REVERSING VALVE FOR HOT WATER AS WELL AS COOLING FUNCTION (4-PIPE SYSTEM)

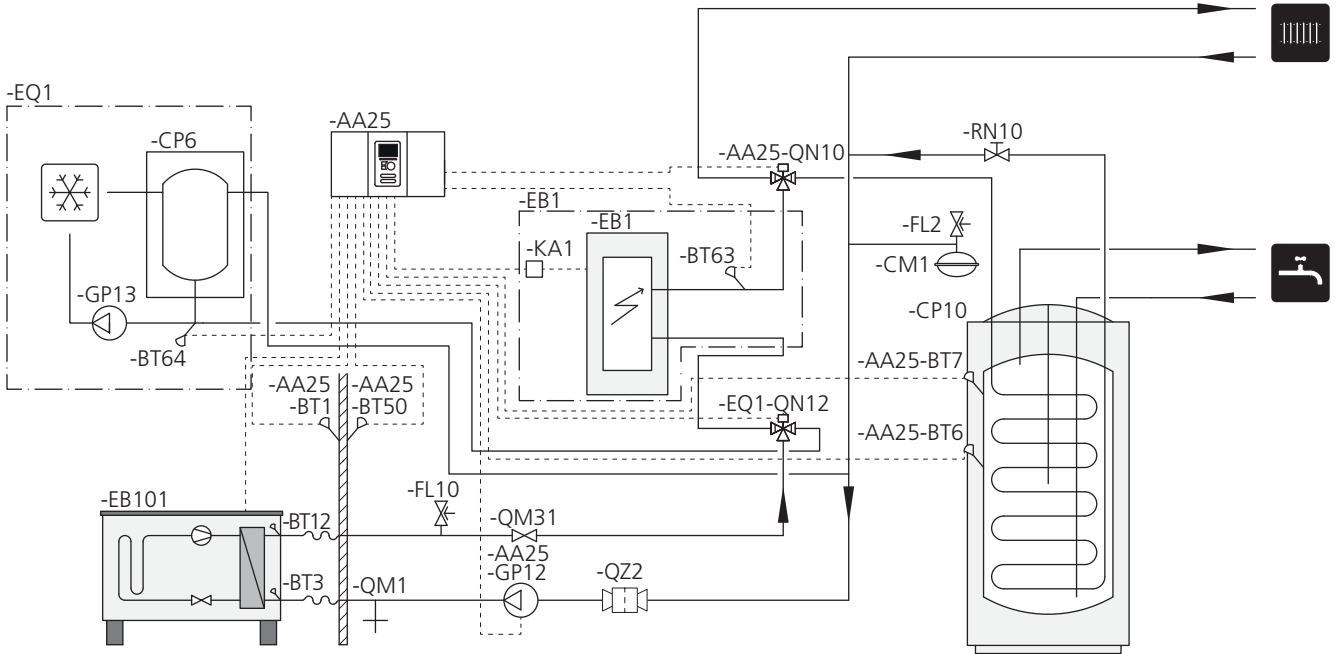

Caution

NIBE does not supply all components in this outline diagram.

switches periodically between the demands. If the cooling demand is met, the reversing valve switches back to basic mode (heat/hot water).


SMO 20 (AA25) starts and stops the heat pump (EB101) to meet the heat and hot water demand of the installation. At simultaneous heating and hot water demand the reversing valve switches (AA25-QN10) periodically between the climate system and the water heater/accumulator tank (CP10). When the hot water heater/accumulator tank is fully charged (CP10), the reversing valve switches (AA25-QN10) to the climate system.

Additional heat (EB1) is connected automatically when the power demand for the installation exceeds the heat pump capacity. This is used for both heating and charging hot water.

The additional heat can also be used if a higher temperature in the hot water is required than the heat pump can produce.

During cooling operation (requires compatible heat pump) the reversing valve (EQ1-QN12) switches to the cooling system (EQ1). If several simultaneous demands occur while there is a cooling demand the installation reacts differently. In event of a hot water demand the reversing valve (EQ1-QN12) switches back and hot water is produced until the demand is fulfilled. In event of a heating demand the reversing valve (EQ1-QN12) instead

COMPATIBLE AIR/WATER HEAT PUMP TOGETHER WITH SMO 20 – DOCKING
STEP-CONTROLLED ADDITIONAL HEAT AFTER THE REVERSING VALVE FOR HOT WATER
AS WELL AS COOLING FUNCTION (4-PIPE SYSTEM)

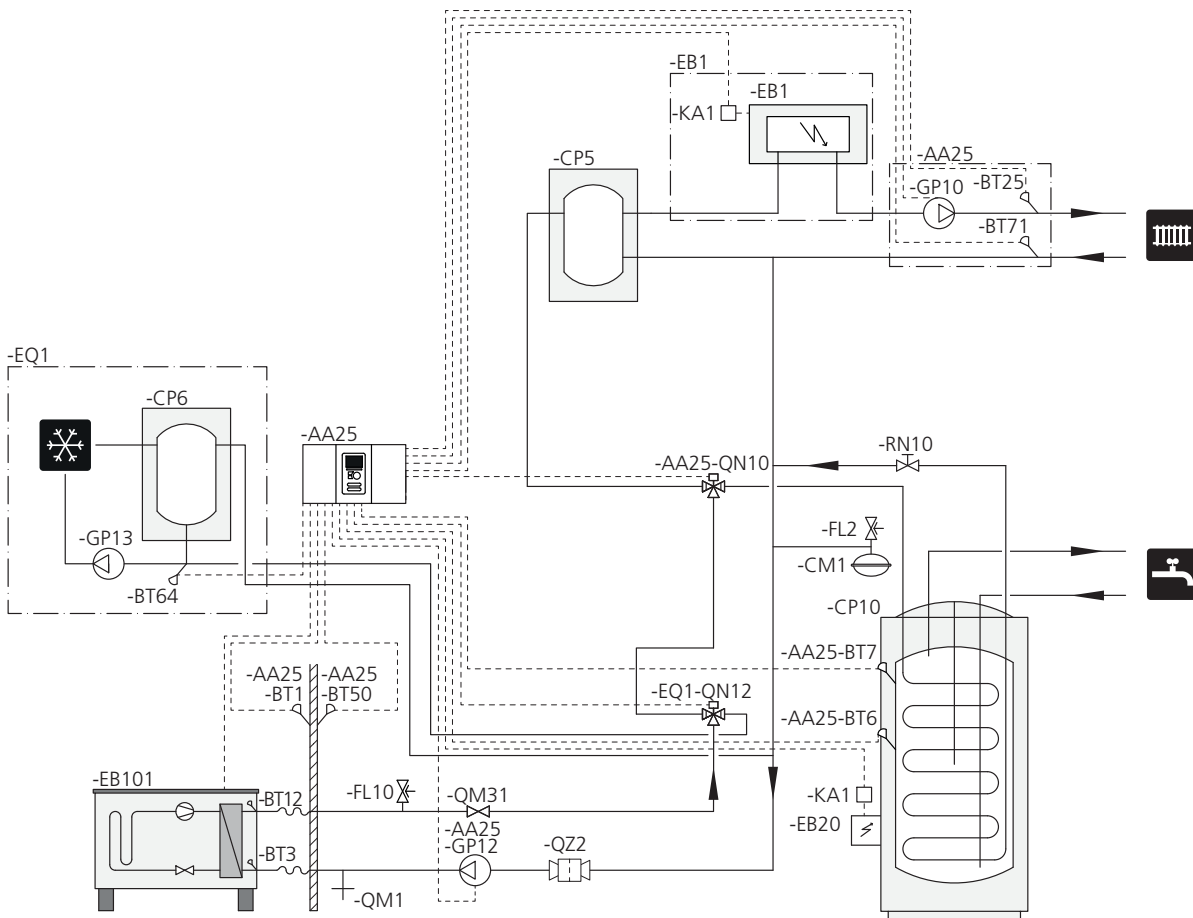

Caution

NIBE does not supply all components in this outline diagram.

This installation alternative is suitable for more complex installations with a focus on comfort.

SMO 20 (AA25) starts and stops the heat pump (EB101) to meet the heat and hot water demand of the installation. At simultaneous heating and hot water demand the reversing valve switches (AA25-QN10) periodically between the climate system and the water heater/accumulator tank (CP10). When the hot water heater/accumulator tank is fully charged (CP10), the reversing valve switches (AA25-QN10) to the climate system.

Additional heat (EB1) is connected automatically when the energy demand exceeds the heat pump capacity. Immersion heater (EB20) in the water heater/accumulator tank (CP10) is used during the time to produce hot water if the heat pump (EB101) is used for heating the building at the same time.

The immersion heater (EB20) can also be used if a higher temperature of hot water is required than the heat pump can produce.

During cooling operation (requires compatible heat pump), the reversing valve (EQ1-QN12) switches to the cooling system (EQ1). If several demands occur while there is a cooling demand, the installation reacts differently. In event of a hot water demand, the reversing valve (EQ1-QN12) switches back and hot water is produced until the demand is fulfilled. In event of a heating demand, the reversing valve (EQ1-QN12) instead switches periodically between the demands. When the cooling demand is met, the reversing valve switches back to basic mode (heat/hot water).

Active cooling (in 4-pipe system) is selected in menu 5.4 - soft in/outputs.

5 Electrical connections

General

- Disconnect SMO 20 before insulation testing the house wiring.
- If the building is equipped with an earth-fault breaker, SMO 20 should be equipped with a separate one.
- SMO 20 must be installed via a circuit breaker with a minimum breaking gap of 3 mm.
- For the electrical wiring diagram for the control module, see page .54.
- Use a three core, screened cable for communication with the heat pump.
- Communication and sensor cables to external connections must not be laid close to high current cables.
- The minimum area of communication and sensor cables to external connections must be 0.5 mm² up to 50 m, for example EKKX, LiYY or equivalent.
- When cable routing into SMO 20, cable grommets (UB1 and UB2, marked in image) must be used.



NOTE

The switch (SF1) must not be moved to "I" or "⚠" until the boiler water has been filled in the system. The compressor in the heat pump and any external additional heat can be damaged.




NOTE

Electrical installation and any servicing must be carried out under the supervision of a qualified electrician. Disconnect the current using the circuit breaker before carrying out any servicing. Electrical installation and wiring must be carried out in accordance with the applicable provisions. When installing SMO 20, NIBE's air/water heat pump and any additional heat must be disconnected from the power supply.



Caution

See outline diagram for your system for physical location of the temperature sensor that is to be installed.

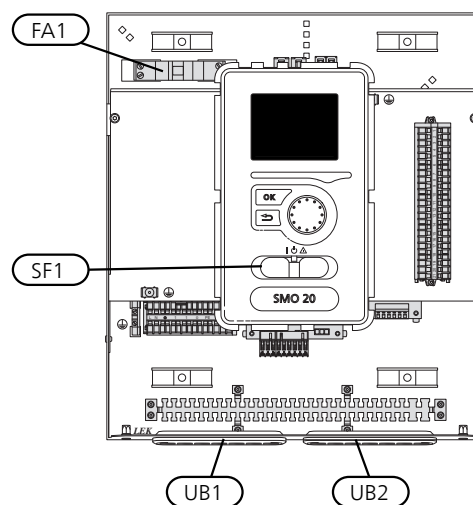


MINIATURE CIRCUIT-BREAKER

The control module operating circuit and parts of its internal components are internally fused by a miniature circuit breaker (FA1).


Accessibility, electrical connection

The cover of the control module is opened using a Torx 25 screwdriver. Assembly takes place in the reverse order.

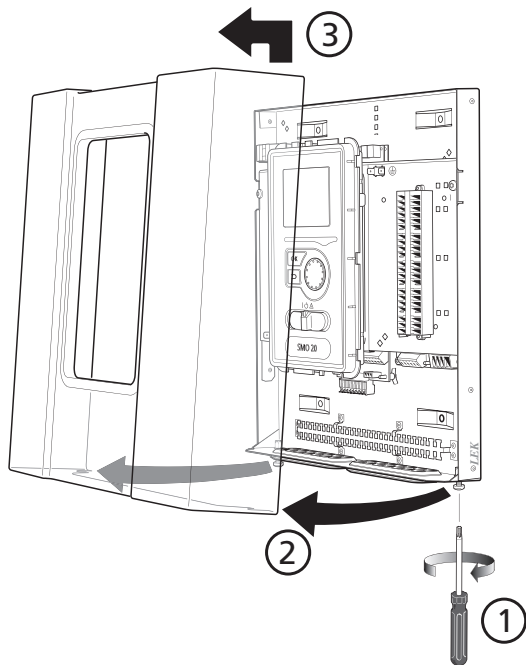


TIP

The cover to access the base board is opened using a Torx 25 screwdriver.

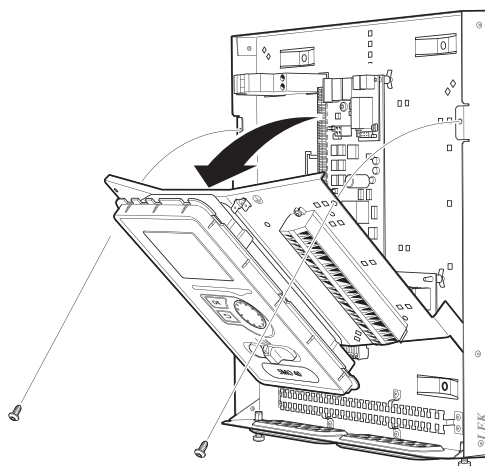


The display may need to be moved for easier access when connecting electrics. This is easily done by following these steps.

1.

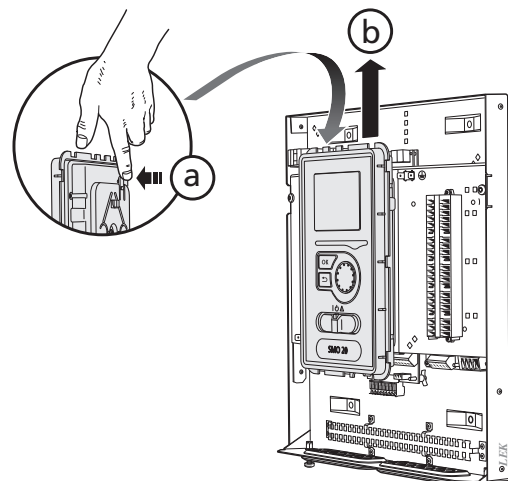


Press in the catch on the upper rear side of the display unit towards you (a) and move the display unit upwards (b) so that the mountings unhook from the panel.

2.

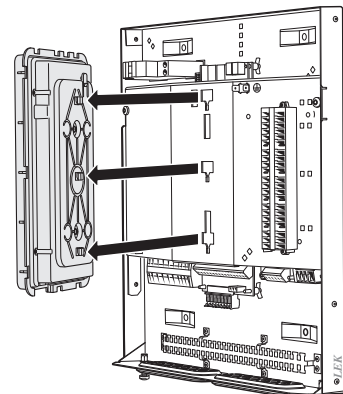


Lift the display unit from its mountings.

3.

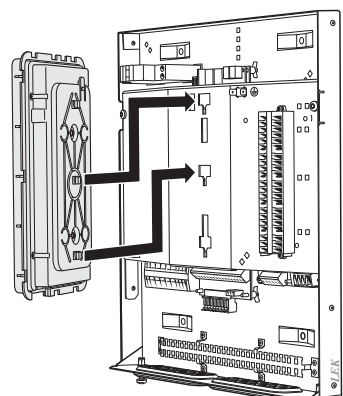

Align the two lower mountings on the reverse of the display unit with the two upper holes in the panel as illustrated.

4.

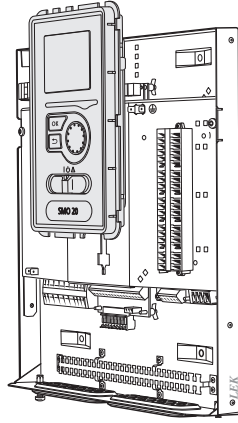


Secure the display on the panel.

5. When the electrical connection is ready the display must be reinstalled with three mounting points again, otherwise the front cover cannot be installed.


Cable lock

Use a suitable tool to release/lock cables in the heat pump terminal blocks.

TERMINAL BLOCK ON THE ELECTRICAL CARD

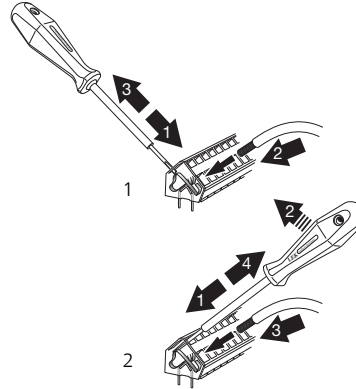

TERMINAL BLOCK

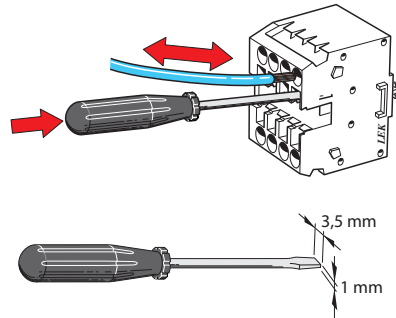

Connections




NOTE

To prevent interference, unscreened communication and/or sensor cables to external connections must not be laid closer than 20 cm from high voltage cables.

POWER CONNECTION

SMO 20 must be installed via an isolator switch with a minimum breaking gap of 3mm. Minimum cable area must be sized according to the fuse rating used.

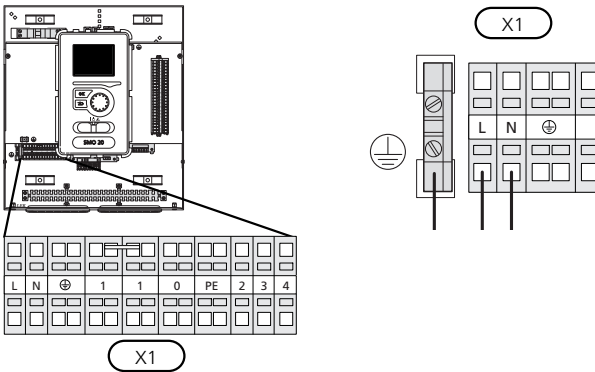





TARIFF CONTROL

If there is a loss of voltage to the compressor in the heat pump for a certain period, simultaneous blocking of this must take place via a software-controlled input (AUX input) in order to avoid alarms, see page 26.

CONNECTING THE CHARGE PUMP FOR THE HEAT PUMP

Connect circulation pump (EB101-GP12) to terminal block X4:5 (PE), X4:6 (N) and X4:7 (230 V) on the base board (AA2) as illustrated.


Connect control signal for (EB101-GP12) to terminal block X2:1 (PWM) and X2:2 (GND) as illustrated.

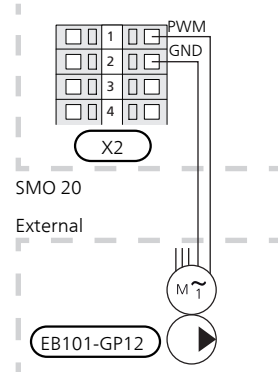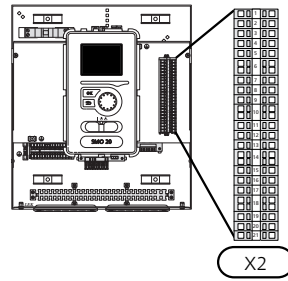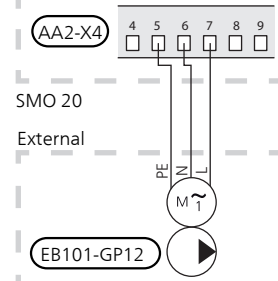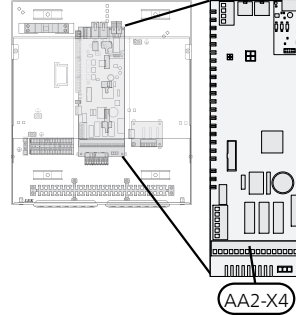


COMMUNICATION WITH HEAT PUMP

Connect the heat pump (EB101) with a screened three core cable to terminal block X2:19 (A), X2:20 (B) and X2:21 (GND) as illustrated.


Connecting to the heat pump

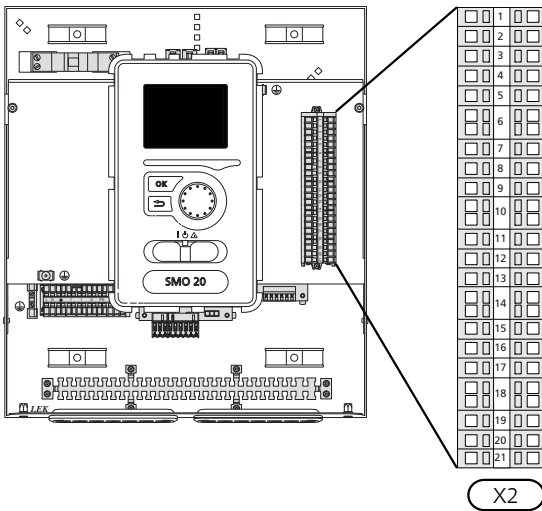


F2040

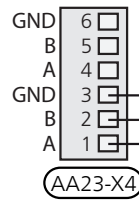


F2030

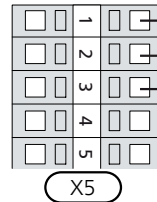


F2016/F2026

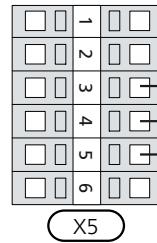


F2015/F2020/F2025/F2300

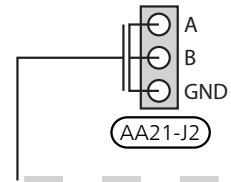

F2120

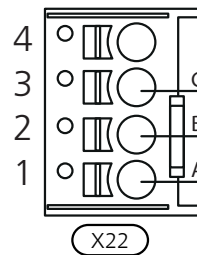

SMO 20

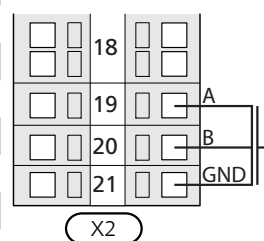


OUTSIDE SENSOR

Install the outdoor temperature sensor (BT1) in the shade on a wall facing north or north-west, so it is unaffected by the morning sun for example.

Connect the sensor to terminal block X2:3 and X2:6. Use a twin core cable with a cable area of at least 0.5 mm².

If a conduit is used it must be sealed to prevent condensation in the sensor capsule.

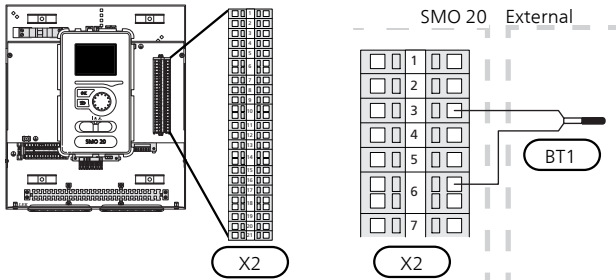

ROOM SENSOR

SMO 20 can be supplemented with a room sensor (BT50). The room sensor has a number of functions:


1. Shows current room temperature in the control module display.
2. Provides the option of changing the room temperature in °C.
3. Provides the option of fine-tuning the room temperature.

Install the sensor in a neutral position where the set temperature is required. A suitable location is on a free inner wall in a hall approx. 1.5 m above the floor. It is important that the sensor is not prevented from measuring the correct room temperature by being located, for example, in a recess, between shelves, behind a curtain, above or close to a heat source, in a draft from an external door or in direct sunlight. Closed radiator thermostats can also cause problems.

The control module operates without the sensor, but if you want to read off the home's indoor temperature in the control module's display, the sensor must be installed. Connect the room sensor to terminal block X2:7 and X2:10.

If the sensor is to be used to change the room temperature in °C and/or to fine-tune the room temperature, the sensor must be activated in menu 1.9.4.

If the room sensor is used in a room with underfloor heating, it should only have an indicative function, not control of the room temperature.

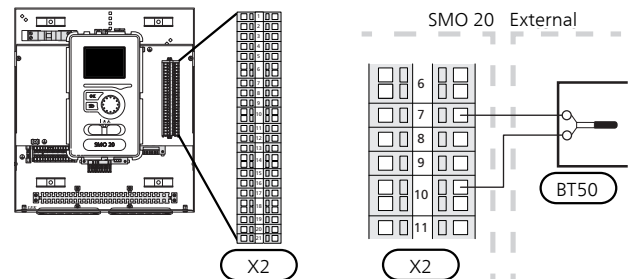

Caution


Changes of temperature in accommodation take time. For example, short time periods in combination with underfloor heating will not give a noticeable difference in room temperature.

TEMPERATURE SENSOR, HOT WATER CHARGING

The temperature sensor, hot water charging (BT6) is placed in the submerged tube on the water heater.

Connect the sensor to terminal block X2:5 and X2:6. Use a twin core cable with a cable area of at least 0.5 mm².


Hot water charging is activated in menu 5.2 or in the start guide.

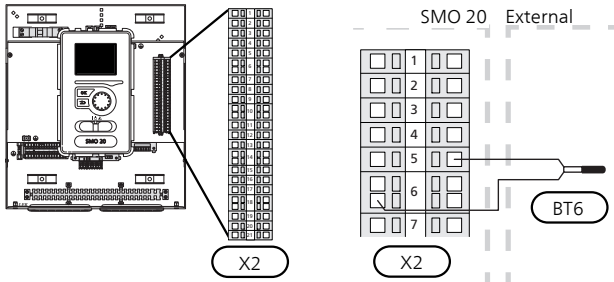

TEMPERATURE SENSOR, HOT WATER TOP


A temperature sensor for hot water top (BT7) can be connected to SMO 20 to show the water temperature at the top of the tank (if it is possible to install a sensor at the top of the tank).

Connect the sensor to terminal block X2:4 and X2:6. Use a twin core cable with a cable area of at least 0.5 mm².

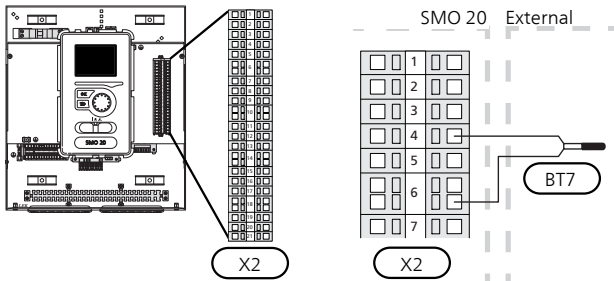


TEMPERATURE SENSOR, EXTERNAL FLOW LINE

Connect the temperature sensor, external supply line (BT25) (required for additional heat after reversing valve (QN10)), to terminal block X2:8 and X2:10. Use a twin core cable with a cable area of at least 0.5 mm².

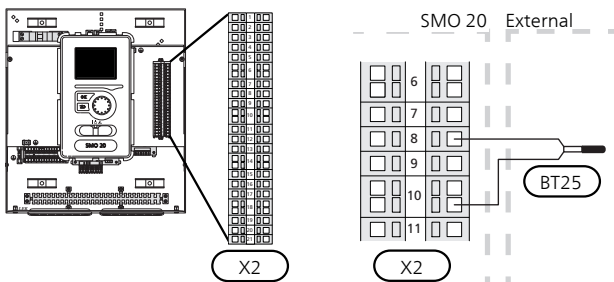

TEMPERATURE SENSOR, EXTERNAL SUPPLY AT ADDITIONAL HEAT BEFORE REVERSING VALVE (QN10)

Connect the temperature sensor, external supply line (BT63) (required for additional heat before the reversing valve for hot water charging (QN10)), to terminal block X2:9 and X2:10. Use a twin core cable with a cable area of at least 0.5 mm².

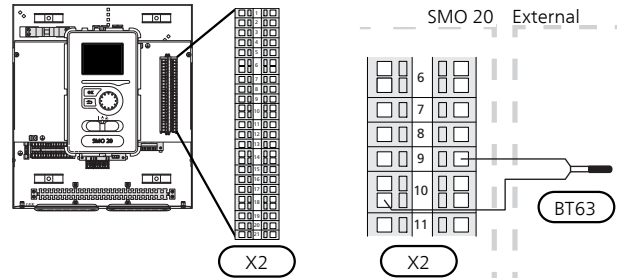

Caution

For docking that requires connection of other sensors, see "Possible selection for AUX inputs" on page 25.

Optional connections

STEP CONTROLLED ADDITIONAL HEAT



NOTE

Mark up any junction boxes with warnings for external voltage.

Step-controlled additional heat before the reversing valve

External step-controlled additional heat can be controlled by up to three potential-free relays in the control module (3 step linear or 7 step binary).

The electric additional heat will charge with the maximum permitted immersion heater output together with the compressor to conclude the hot water charging and return to charging the heating as soon as possible. This only occurs when the number of degree minutes is below the start value for the additional heat.

Step-controlled additional heat after the reversing valve

External step-controlled additional heat can be controlled by two relays (2 step linear or 3 step binary), which means that the third relay is used to control the immersion heater in the water heater/accumulator tank.

Step in occurs with at least 1 minute interval and step outs with at least 3 seconds interval.



Step 1 is connected to terminal block X2:2 on the additional relay board (AA7).

Step 2 is connected to terminal block X2:4 on the additional relay board (AA7).

Step 3 or immersion heater in the water heater/accumulator tank is connected to terminal block X2:6 on the additional relay board (AA7).

The settings for step controlled additional heat are made in menu 4.9.3 and menu 5.1.12.

All additional heat can be blocked by connecting a potential-free switch function to the software controlled input on terminal block X2 (see page 26), which is selected in menu 5.4.

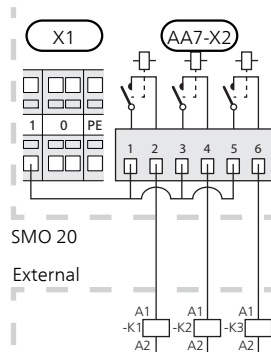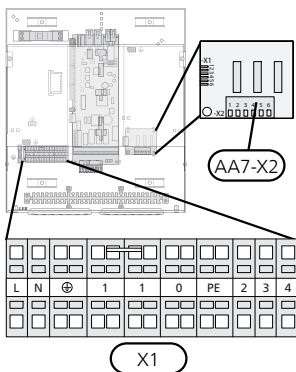

If the relays are to be used for control voltage, bridge the supply from terminal block X1:1 to X2:1, X2:3 and X2:5 on additional relay board (AA7). Connect the neutral from the external additional heat to terminal block X1:0.

RELAY OUTPUT FOR EMERGENCY MODE



NOTE

Mark up any junction boxes with warnings for external voltage.





When the switch (SF1) is in "Δ" mode (emergency mode) the circulation pump is activated (EB101-GP12).



Caution

No hot water is produced when emergency mode is activated.


The emergency mode relay can be used to activate external additional heat, an external thermostat must then be connected to the control circuit to control the temperature. Ensure that the heating medium circulates through the external additional heating.

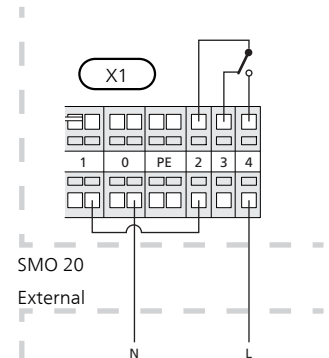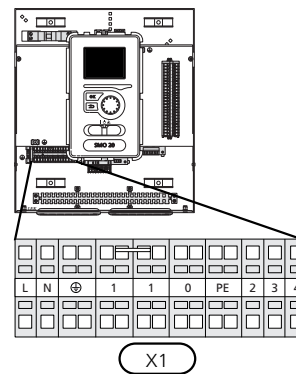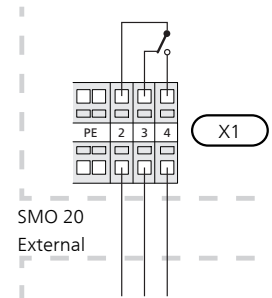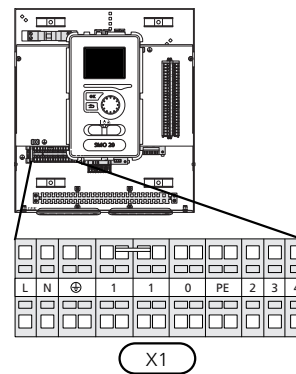

If the relay is to be used for control voltage, bridge the supply from terminal block X1:1 to X1:2 and connect neutral and control voltage from the external additional heat to X1:0 (N) and X1:4 (L).

EXTERNAL CIRCULATION PUMP

Connect the external circulation pump (GP10) to terminal block X4:9 (PE), X4:10 (N) and X4:11 (230 V) on the base board (AA2) as illustrated.

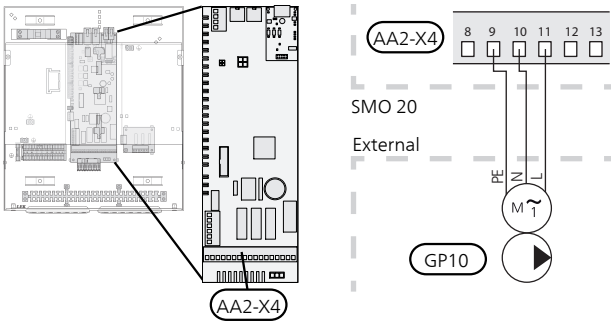


SHUTTLE VALVE

SMO 20 can be supplemented with an external reversing valve (QN10) for hot water control. (See page 49 for accessory)


Hot water production can be selected in menu 5.2.4.

Connect the external reversing valve (QN10) as illustrated to terminal block X4:2 (N), X4:3 (control) and X4:4 (L) on the base board (AA2).

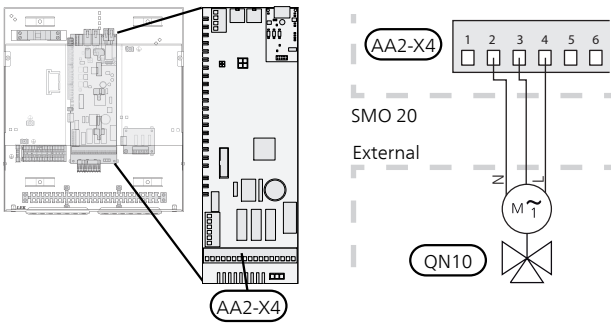


NIBE UPLINK

Connect the network connected cable (straight, Cat.5e UTP) with RJ45 contact (male) to contact AA4-X9 on the display unit (as illustrated). Use the cable grommet (UB2) in the control module for cable routing.

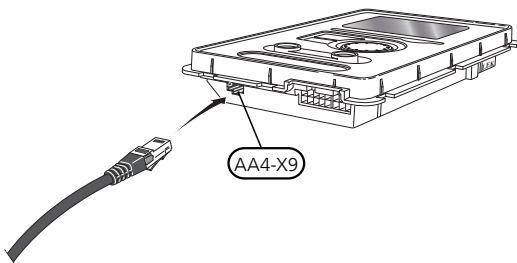

EXTERNAL CONNECTION OPTIONS (AUX)

On terminal block (X2), SMO 20 has software-controlled AUX inputs and outputs for connecting the external switch function or sensor. This means that when an external switch function (the switch must be potential-free) or sensor is connected to one of the six special connections, this function for the connection must be selected in menu 5.4.

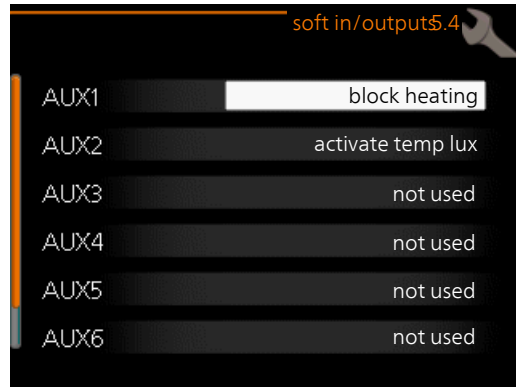


For certain functions, accessories may be required.

Selectable inputs

Selectable inputs on the input board for these functions are:

AUX1	X2:11
AUX2	X2:12
AUX3	X2:13
AUX4	X2:15
AUX5	X2:16
AUX6	X2:17

GND is connected to terminal block X2:14 or X2:18.

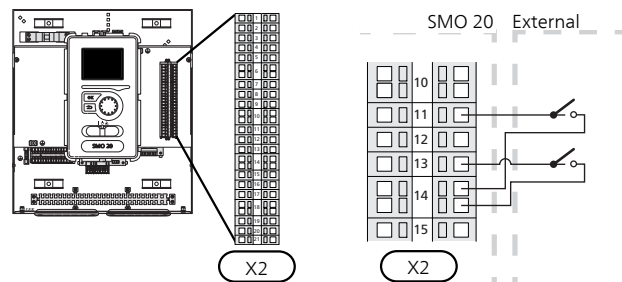

The example above uses the inputs AUX1 (X2:11) and AUX3 (X2:13) on terminal block X2.

Selectable output

A selectable output is AA2-X4:15-17.



TIP

Some of the following functions can also be activated and scheduled via menu settings.

Possible selection for AUX inputs

Temperature sensor

Temperature sensor can be connected to SMO 20. Use a 2-core cable of at least 0.5 mm² cable area.

Available options are:

- external supply temperature sensor cooling (EQ1-BT25) is used when docking 2-pipe cooling. (can be selected when the air/water heat pump is permitted to produce cooling)
- cooling/heating (BT74), determines when it is time to switch between cooling and heating mode (can be selected when the air/water heat pump is permitted to produce cooling)
- supply cooling (BT64) is used with active cooling 4-pipe (can be selected when the air/water heat pump is permitted to produce cooling)
- return temperature (BT71)

Monitor

Available options are:

- alarm from external units. The alarm is connected to the control, which means that the malfunction is presented as an information message in the display. Potential-free signal of type NO or NC.

External activation of functions

An external switch function can be connected to SMO 20 to activate various functions. The function is activated during the time the switch is closed.

Possible functions that can be activated:

- hot water comfort mode "temporary lux"
- hot water comfort mode "economy"
- "external adjustment"

An external contact function can be connected to SMO 20 to change the supply temperature and the room temperature.

When the switch is closed, the temperature is changed in °C (if the room sensor is connected and activated). If a room sensor is not connected or not activated, the desired change of "temperature" (heating curve offset) is set with the number of steps selected. The value is adjustable between -10 and +10.

– *climate system 1*

The value for the change is set in menu 1.9.2, "external adjustment".

- SG ready



Caution

This function can only be used in mains networks that support the "SG Ready" standard. "SG Ready" requires two AUX inputs.

In cases where this function is wanted it must be connected to terminal block X2.

"SG Ready" is a smart form of tariff control where your electricity supplier can affect the indoor and hot water temperatures or simply block the additional heat and/or the compressor in the heat pump at certain times of the day (can be selected in menu 4.1.5 after the function is activated). Activate the function by connecting potential-free switch functions to two inputs selected in menu 5.4 (SG Ready A and SG Ready B).

Closed or open switch means one of the following:

– *Blocking (A: Closed, B: Open)*

"SG Ready" is active. The compressor in the heat pump and additional heat is blocked like the day's tariff blocking.

– *Normal mode (A: Open, B: Open)*

"SG Ready" is not active. No effect on the system.

– *Low price mode (A: Open, B: Closed)*

"SG Ready" is active. The system focuses on costs savings and can for example exploit a low tariff from the electricity supplier or over-capacity from any own power source (effect on the system can be adjusted in the menu 4.1.5).

– *Overcapacity mode (A: Closed, B: Closed)*

"SG Ready" is active. The system is permitted to run at full capacity at over capacity (very low price) with the electricity supplier (effect on the system is settable in menu 4.1.5).

(A = SG Ready A and B = SG Ready B)

External blocking of functions

An external switch function can be connected to SMO 20 for blocking various functions. The switch must be potential-free and a closed switch results in blocking.



NOTE


Blocking entails a risk of freezing.

Functions that can be blocked:


- hot water (hot water production). Any hot water circulation (HWC) remains in operation.
- heating/cooling (production and distribution)
- additional heat (additional heat is blocked)
- compressor in heat pump EB101
- tariff blocking (additional heat, compressor, heating, cooling and hot water are disconnected)

Possible selections for AUX output

There is the option to have an external connection by means of a relay function via a potential-free switching relay (max. 2 A) on the base board (AA2), terminal block X4:15-17. The function must be activated in menu 5.4.

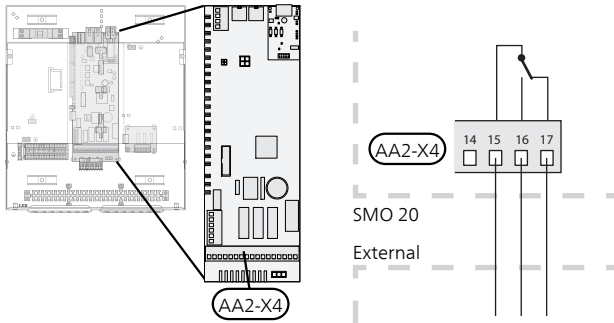

An external circulation pump is connected to the AUX output, as illustrated below.

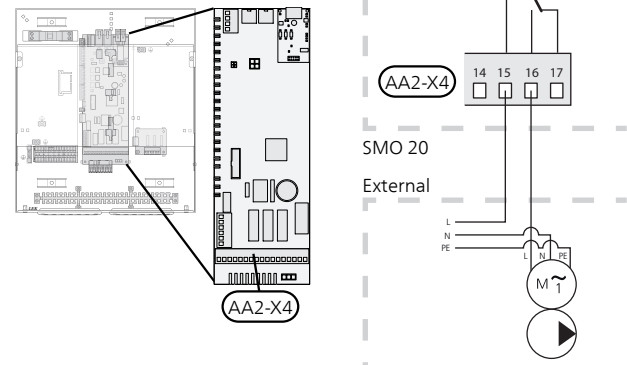

The picture shows the relay in the alarm position.

When switch (SF1) is in the "U" or "Δ" position the relay is in the alarm position.



Caution

The relay outputs may be subjected to a max load of 2 A at resistive load (230V AC).

Optional functions for external connection:

Indications

- alarm indication
- cooling mode indication (can be selected when the air/water heat pump is permitted to produce cooling)

Control

- control of circulation pump for hot water circulation
- control of active cooling in a 4-pipe system (can be selected when the air/water heat pump is permitted to run cooling)
- control of external circulation pump (for heating medium)
- controlling wood docking
- photovoltaic control (Can be selected when the accessory EME 20 is activated.)

Activation

- activation of away mode for "smart home" (complement to the functions in menu 4.1.7)



NOTE

The relevant distribution box must be marked with a warning about external voltage.

Connecting accessories

Instructions for connecting other accessories are in the installation instructions provided. See page 49 for a list of those accessories that can be used for SMO 20.

6 Commissioning and adjusting

Preparations

- Compatible NIBE air/water heat pump must be equipped with a control board that, as a minimum, has the software version as listed on page 12. The control board's version is shown in the heat pump's display (if applicable) at start-up.
- SMO 20 must be ready-connected.
- The climate system must be filled with water and bled.

Commissioning

WITH NIBE AIR/WATER HEAT PUMP

Follow the instructions in the heat pump's Installer Manual under section "Commissioning and adjustment" – "Start-up and inspection".

SMO 20

1. Power the heat pump.
2. Power SMO 20.
3. Follow the start guide in the display on SMO 20 alternatively start the start guide in menu 5.7.

Commissioning with additional heating only

At first start follow the start guide, otherwise follow the list below.

1. Configure the additional heat in menu 5.1.12.
2. Go to menu 4.2 op. mode.
3. Mark "add. heat only" using the control knob and then press the OK button.
4. Return to the main menus by pressing the Back button.



Caution

When commissioning without NIBE air/water heat pump an alarm communication error may appear in the display.

The alarm is reset if the relevant air/water heat pump is deactivated in menu 5.2.2 ("installed heat pump").

Check the reversing valve

1. Activate "AA2-K1 (QN10)" in menu 5.6.
2. Check that the reversing valve opens or is open for hot water charging.
3. Deactivate "AA2-K1 (QN10)" in menu 5.6.

Check AUX socket

To check any function connected to the AUX socket

1. Activate "AA2-X4" in menu 5.6.
2. Check the desired function.
3. Deactivate "AA2-X4" in menu 5.6.

Cooling mode

If the installation contains a NIBE air/water heat pump that can produce cooling (NIBE F2040 or F2120) cooling can be permitted. See relevant Installer Manual.

When cooling operation is permitted you can choose cooling mode indication in menu 5.4 for the AUX output.

Start-up and inspection

START GUIDE



NOTE

There must be water in the climate system before the switch is set to "I".

1. Set switch (SF1) on SMO 20 to position "I".
2. Follow the instructions in the display's start guide. If the start guide does not start when you start the SMO 20, start it manually in menu 5.7.



TIP

See the section "Control – Introduction" for a more detailed introduction to the installation's control system (operation, menus, etc.).

Commissioning

The first time the installation is started a start guide is started. The start guide instructions state what needs to be carried out at the first start together with a run through of the installation's basic settings.

The start guide ensures that start-up is carried out correctly and cannot be bypassed. The start guide can be started later in menu 5.7.

During the start-up guide, the reversing valves and the shunt are run back and forth to help vent the heat pump.



Caution


As long as the start guide is active, no function in SMO 20 will start automatically.

The start guide will appear at each restart of SMO 20, until it is deselected on the last page.

Operation in the start guide

A. Page

B. Name and menu number

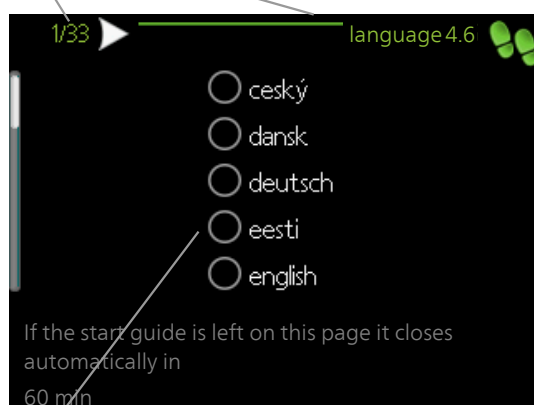

C. Option / setting

A. Page

Here you can see how far you have come in the start guide.

Scroll between the pages of the start guide as follows:

1. Turn the control knob until one of the arrows in the top left corner (at the page number) has been marked.
2. Press the OK button to skip between the pages in the start guide.

B. Name and menu number

Here, you can see which menu in the control system this page of the start guide is based on. The digits in brackets refer to the menu number in the control system.

If you want to read more about affected menus either consult the help menu or read the user manual.

C. Option / setting

Make settings for the system here.

D. Help menu



In many menus there is a symbol that indicates that extra help is available.


To access the help text:

1. Use the control knob to select the help symbol.
2. Press the OK button.

The help text often consists of several windows that you can scroll between using the control knob.

7 Control - Introduction

Display unit

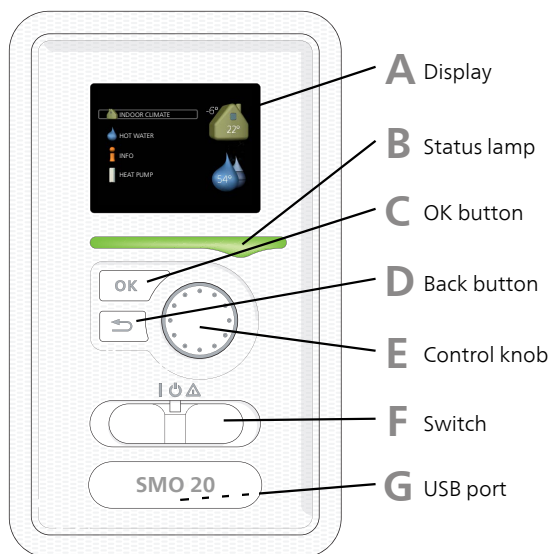

A DISPLAY

Instructions, settings and operational information are shown on the display. You can easily navigate between the different menus and options to set the comfort or obtain the information you require.

B STATUS LAMP

The status lamp indicates the status of the control module. It:

- lights green during normal operation.
- lights yellow in emergency mode.
- lights red in the event of a deployed alarm.

C OK BUTTON

The OK button is used to:

- confirm selections of sub menus/options/set values/page in the start guide.

D BACK BUTTON

The back button is used to:

- go back to the previous menu.
- change a setting that has not been confirmed.

E CONTROL KNOB

The control knob can be turned to the right or left. You can:

- scroll in menus and between options.
- increase and decrease the values.
- change page in multiple page instructions (for example help text and service info).

F SWITCH (SF1)

The switch assumes three positions:

- On (I)
- Standby (O)
- Emergency mode (Δ)

The emergency mode must only be used in the event of a fault in the control module. In this mode, the compressor in the heat pump switches off and any immersion heater engages. The control module display is not lit and the status lamp shines yellow.


G USB PORT

The USB port is hidden beneath the plastic badge with the product name on it.

The USB port is used to update the software.

Visit nibeuplink.com and click the "Software" tab to download the latest software for your installation.

Menu system

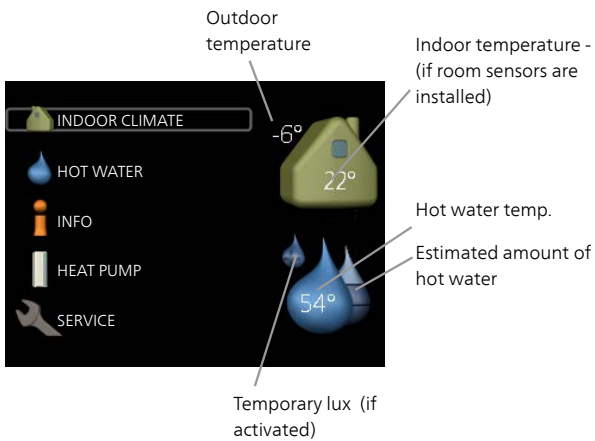

MENU 1 - INDOOR CLIMATE

Setting and scheduling the indoor climate. See information in the help menu or user manual.

MENU 2 - HOT WATER

Setting and scheduling hot water production. See information in the help menu or user manual.

This menu only appears if a water heater is installed in the system.

MENU 3 - INFO

Display of temperature and other operating information and access to the alarm log. See information in the help menu or user manual.

MENU 4 - MY SYSTEM

Setting time, date, language, display, operating mode etc. See information in the help menu or user manual.


MENU 5 - SERVICE

Advanced settings. These settings are not available to the end user. The menu is visible when the Back button is pressed for 7 seconds, when you are in the start menu. See page 38.

SYMBOLS IN THE DISPLAY


The following symbols can appear in the display during operation.

Symbol	Description
	This symbol appears by the information sign if there is information in menu 3.1 that you should note.
	These two symbols indicate if the compressor in the outdoor module or the additional heat in the installation is blocked via SMO 20. These can, for example, be blocked depending on which operating mode is selected in menu 4.2, if blocking is scheduled in menu 4.9.5 or if an alarm has occurred that blocks one of them. Blocking the compressor. Blocking additional heat.
	This symbol appears if periodic increase or lux mode for the hot water is activated.
	This symbol indicates whether "holiday setting" is active in 4.7.
	This symbol indicates whether SMO 20 has contact with NIBE Uplink.
	This symbol is visible in installations with active solar accessories.
	This symbol indicates whether cooling is active. Heat pump with cooling function required.

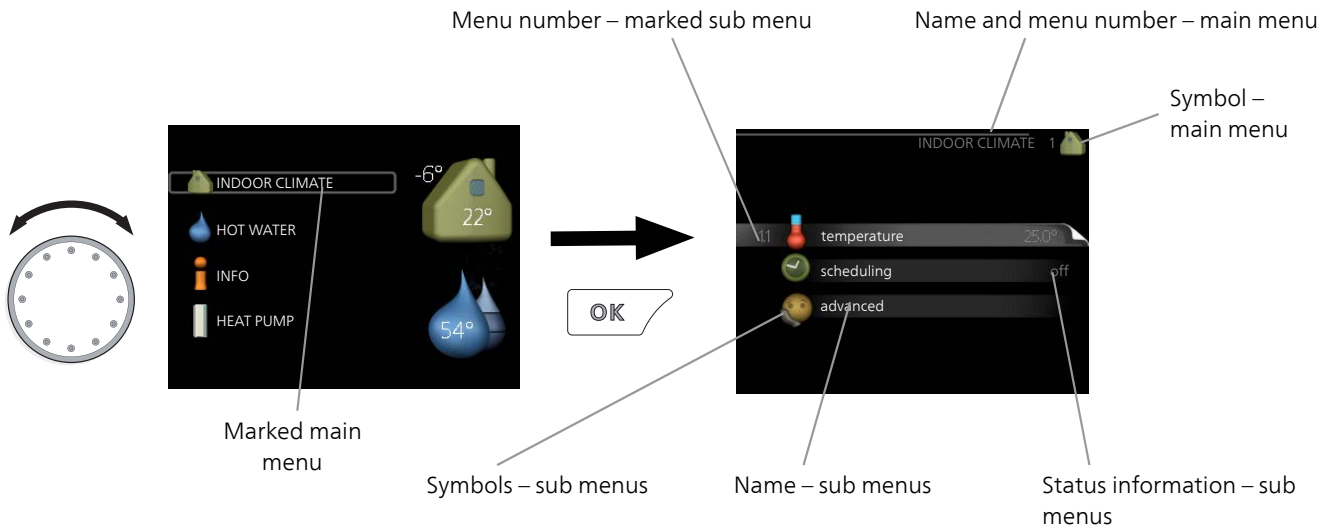

OPERATION

 To move the cursor, turn the control knob to the left or the right. The marked position is brighter and/or has a light frame.

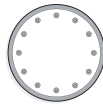

SELECTING MENU

To advance in the menu system select a main menu by marking it and then pressing the OK button. A new window then opens with sub menus.

Select one of the sub menus by marking it and then pressing the OK button.



SELECTING OPTIONS



In an options menu the current selected option is indicated by a green tick.



To select another option:

1. Mark the applicable option. One of the options is pre-selected (white). 
2. Press the OK button to confirm the selected option. The selected option has a green tick. 

SETTING A VALUE




Values to be changed

To set a value:

1. Mark the value you want to set using the control knob. 01
2. Press the OK button. The background of the value becomes green, which means that you have accessed the setting mode. 01
3. Turn the control knob to the right to increase the value and to the left to reduce the value. 04
4. Press the OK button to confirm the value you have set. To change and return to the original value, press the Back button. 04

USE THE VIRTUAL KEYBOARD

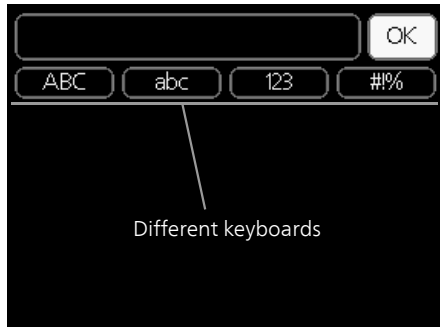

In some menus where text may require entering, a virtual keyboard is available.

 


Depending on the menu, you can gain access to different character sets which you can select using the control knob. To change character table, press the Back button. If a menu only has one character set the keyboard is displayed directly.

When you have finished writing, mark "OK" and press the OK button.

SCROLL THROUGH THE WINDOWS

A menu can consist of several windows. Turn the control knob to scroll between the windows.




Scroll through the windows in the start guide



Arrows to scroll through window in start guide

1. Turn the control knob until one of the arrows in the top left corner (at the page number) has been marked.
2. Press the OK button to skip between the steps in the start guide.

HELP MENU

 In many menus there is a symbol that indicates that extra help is available.

To access the help text:

1. Use the control knob to select the help symbol.
2. Press the OK button.

The help text often consists of several windows that you can scroll between using the control knob.

8 Control

Menu 1 - INDOOR CLIMATE

1 - INDOOR CLIMATE	1.1 - temperature	1.1.1 - heating			
		1.1.2 - cooling *			
	1.3 - scheduling	1.3.1 - heating			
		1.3.2 - cooling *			
	1.9 - advanced	1.9.1 - curve	1.9.1.1 heating curve		
			1.9.1.2 - cooling curve *		
		1.9.2 - external adjustment			
		1.9.3 - min. flow line temp.	1.9.3.1 - heating		
			1.9.3.2 - cooling *		
		1.9.4 - room sensor settings			
		1.9.5 - cooling settings *			
		1.9.7 - own curve	1.9.7.1 - heating		
	1.9.7.2 - cooling *				
1.9.8 - point offset					

* Heat pump with cooling function required.

Menu 2 - HOT WATER

2 - HOT WATER	2.1 - temporary lux
	2.2 - comfort mode
	2.3 - scheduling
	2.9 - advanced
	2.9.1 - periodic increase
	2.9.2 - hot water recirc. *

Menu 3 - INFO

3 - INFO	3.1 - service info
	3.2 - compressor info
	3.3 - add. heat info
	3.4 - alarm log
	3.5 - indoor temp. log

* Accessories are needed.

Menu 4 - MY SYSTEM

4 - MY SYSTEM	4.1 - plus functions	4.1.3 - internet	4.1.3.1 - NIBE Uplink
			4.1.3.8 - tcp/ip settings
			4.1.3.9 - proxy settings
		4.1.5 - SG Ready	
		4.1.6 - smart price adaption™	
		4.1.7 - smart home	
		Menu 4.1.10 – solar electricity *	
	4.2 - op. mode		
	4.4 - time & date		
	4.6 - language		
	4.7 - holiday setting		
	4.9 - advanced	4.9.1 - op. prioritisation	
		4.9.2 - auto mode setting	
		4.9.3 - degree minute setting	
		4.9.4 - factory setting user	
		4.9.5 - schedule blocking	
		4.9.6 - schedule silent mode	
		4.9.7 – tools	

* Accessories are needed.

Menu 5 - SERVICE

OVERVIEW

5 - SERVICE	5.1 - operating settings	5.1.1 - hot water settings *
		5.1.2 - max flow line temperature
		5.1.3 - max diff flow line temp.
		5.1.4 - alarm actions
		5.1.12 - addition
		5.1.14 - flow set. climate system
		5.1.22 - heat pump testing
		5.1.23 - compressor curve
	5.2 - system settings	5.2.2 - installed heat pump
		5.2.4 - accessories
	5.4 - soft in/outputs	
	5.5 - factory setting service	
	5.6 - forced control	
	5.7 - start guide	
	5.8 - quick start	
	5.9 - floor drying function	
	5.10 - change log	
	5.11 - heat pump settings	5.11.1.1 - heat pump
		5.11.1.2 - charge pump (GP12)
	5.12 - country	

* Accessory needed.

Go to the main menu and hold the Back button in for 7 seconds to access the Service menu.

Sub-menus

Menu **SERVICE** has orange text and is intended for the advanced user. This menu has several sub-menus. Status information for the relevant menu can be found on the display to the right of the menus.

operating settings Operating settings for the control module.

system settings System settings for the control module, activating accessories etc.

soft in/outputs Setting software-controlled inputs and outputs on terminal block (X2).

factory setting service Total reset of all settings (including settings available to the user) to default values.

forced control Forced control of the different components in the indoor module.

start guide Manual start of the start guide which is run the first time when the control module is started.

quick start Quick starting the compressor.



NOTE

Incorrect settings in the service menus can damage the installation.

MENU 5.1 - OPERATING SETTINGS

Operating settings can be made for the control module in the sub menus.

MENU 5.1.1 - HOT WATER SETTINGS

The hot water settings require that hot water production is activated in menu 5.2.4 accessories.

economy

Setting range start temp. economy: 5 – 55 °C

Factory setting start temp. economy: 42 °C

Setting range stop temp. economy: 5 – 60 °C

Factory setting stop temp. economy: 48 °C

normal

Setting range start temp. normal: 5 – 60 °C

Factory setting start temp. normal: 46 °C

Setting range stop temp. normal: 5 – 65 °C

Factory setting stop temp. normal: 50 °C

luxury

Setting range start temp. lux: 5 – 70 °C

Factory setting start temp. lux: 49 °C

Setting range stop temp. lux: 5 – 70 °C

Factory setting stop temp. lux: 53 °C

stop temp. per. increase

Setting range: 55 – 70 °C

Factory setting: 55 °C

charge method

Setting range: target temp, delta temp

Default value: delta temp

Here you set the start and stop temperature of the hot water for the different comfort options in menu 2.2 as well as the stop temperature for periodic increase in menu 2.9.1.

The charge method for hot water operation is selected here. "delta temp" is recommended for heaters with charge coil, "target temp" for double-jacketed heaters and heaters with hot water coil.

MENU 5.1.2 - MAX FLOW LINE TEMPERATURE

climate system

Setting range: 5-80 °C

Default value: 60 °C

Set the maximum supply temperature for the climate system here.



Caution

Underfloor heating systems are normally **max flow line temperature** set between 35 and 45 °C.

Check the max floor temperature with your floor supplier.

MENU 5.1.3 - MAX DIFF FLOW LINE TEMP.

max diff compressor

Setting range: 1 – 25 °C

Default value: 10 °C

max diff addition

Setting range: 1 – 24 °C

Default value: 7 °C

Here you set the maximum permitted difference between the calculated and actual supply temperature during compressor respectively add. heat mode. Max diff. additional heat can never exceed max diff. compressor

max diff compressor

If the current supply temperature *exceeds* the calculated supply by set value, the degree minute value is set to +2. The compressor in the heat pump stops if there is only a heating demand.

max diff addition

If "addition" is selected and activated in menu 4.2 and the current supply temperature *exceeds* the calculated temperature by the set value, the additional heat is forced to stop.

MENU 5.1.4 - ALARM ACTIONS

Select how you want the control module to alert you that there is an alarm in the display here. The different alternatives are; the heat pump stops producing hot water and/or reduces the room temperature.



Caution

If no alarm action is selected, it can result in higher energy consumption in the event of an alarm.

MENU 5.1.12 - ADDITION

max step

Setting range (binary stepping deactivated): 0 – 3

Setting range (binary stepping activated): 0 – 7

Default value: 3

fuse size

Setting range: 1 - 200 A

Factory setting: 16 A

Here you select whether the step controlled additional heat is positioned before or after the reversing valve for hot water charging (QN10). Step controlled additional heat is for example an external electric boiler.

Here you can set the max permitted number of additional heat steps and binary or linear stepping. When binary stepping is deactivated (off), the settings refer to linear stepping.

If accessory hot water is available and additional heat location is selected to "after QN10" the number of steps are restricted to 2 steps linear or 3 steps binary. Output AA7-X2:6 is reserved in this mode for additional heat in the hot water tank.

You can also set the fuse size.



TIP

See the accessory installation instructions for function description.

MENU 5.1.14 - FLOW SET. CLIMATE SYSTEM

presettings

Setting range: radiator, floor heat., rad. + floor heat., DOT °C

Default value: radiator

Setting range DOT: -40.0 – 20.0 °C

The factory setting of DOT value depends on the country that has been given for the product's location. The example below refers to Sweden.

Factory setting DOT: -20.0 °C

own setting

Setting range dT at DOT: 0.0 – 25.0

Factory setting dT at DOT: 10.0

Setting range DOT: -40.0 – 20.0 °C

Factory setting DOT: -20.0 °C

The type of heating distribution system the heating medium pump works towards is set here.

dT at DOT is the difference in degrees between flow and return temperatures at dimensioned outdoor temperature.

MENU 5.1.22 - HEAT PUMP TESTING



NOTE

This menu is intended for testing SMO 20 according to different standards.

Use of this menu for other reasons may result in your installation not functioning as intended.

This menu contains several sub-menus, one for each standard.

MENU 5.1.23 - COMPRESSOR CURVE



Caution

This menu is only displayed if SMO 20 is connected to a heat pump with inverter controlled compressor.

Set whether the compressor in the heat pump should work to a particular curve under specific requirements or if it should work to predefined curves.

You set a curve for a demand (heat, hot water, cooling etc.) by unticking "auto", turning the control knob until a temperature is marked and pressing OK. You can now set at what temperature max- respectively min frequencies will occur.

This menu can consist of several windows (one for each available demand), use the navigation arrows in the top left corner to change between the windows.

MENU 5.2 - SYSTEM SETTINGS

Make different system settings for your installation here, e.g. activate the connected heat pump and which accessories are installed.

MENU 5.2.2 - INSTALLED HEAT PUMP

If an air/water heat pump is connected to the control module, you set it here.

MENU 5.2.4 - ACCESSORIES

Set which accessories are installed on the installation here.

If the water heater is connected to SMO 20 hot water charging must be activated here.

MENU 5.4 - SOFT IN/OUTPUTS

Here you can select which in/output on the terminal block (X2) external switch function (page 25)

Selectable inputs on terminal blocks AUX 1-6 (X2:11-18 and output AA2-X4).

MENU 5.5 - FACTORY SETTING SERVICE

All settings can be reset (including settings available to the user) to default values here.



Caution

When resetting, the start guide is displayed the next time the control module is restarted.

MENU 5.6 - FORCED CONTROL

You can force control the different components in the control module and any connected accessories here.

MENU 5.7 - START GUIDE

When the control module is started for the first time the start guide starts automatically. Start it manually here.

See page 30 for more information about the start guide.

MENU 5.8 - QUICK START

It is possible to start the compressor from here.



Caution

There must be a heating, cooling or hot water demand to start the compressor.



NOTE

Do not quick start the compressor too many times over a short period of time, as this could damage the compressor and its surrounding equipment.

MENU 5.9 - FLOOR DRYING FUNCTION

length of period 1 – 7

Setting range: 0 – 30 days

Factory setting, period 1 – 3, 5 – 7: 2 days

Factory setting, period 4: 3 days

temp. period 1 – 7

Setting range: 15 – 70 °C

Default value:

temp. period 1	20 °C
temp. period 2	30 °C
temp. period 3	40 °C
temp. period 4	45 C
temp. period 5	40 °C
temp. period 6	30 °C
temp. period 7	20 °C

Set the function for under floor drying here.

You can set up to seven period times with different calculated flow temperatures. If less than seven periods are to be used, set the remaining period times to 0 days.

Mark the active window to activate the underfloor drying function. A counter at the bottom shows the number of days the function has been active.



TIP

If operating mode "add. heat only" is to be used, select it in menu 4.2.



TIP

It is possible to save a floor drying log that shows when the concrete slab has reached the correct temperature. See section "Logging floor drying" on page 45.

MENU 5.10 - CHANGE LOG

Read off any previous changes to the control system here.

The date, time and ID no. (unique to certain settings) and the new set value is shown for every change.



Caution

The change log is saved at restart and remains unchanged after factory setting.

MENU 5.11 - HEAT PUMP SETTINGS

Settings for installed heat pump can be made in the submenus.

MENU 5.11.1.1 - HEAT PUMP

Make settings for the installed heat pump here. To see what settings you can make, see installation manual for the heat pump.

MENU 5.11.1.2 - CHARGE PUMP (GP12)

op. mode

Heating/cooling

Setting range: auto / intermittent

Default value: auto

Set the operating mode for the charge pump here.

auto: The charge pump runs according to the current operating mode for SMO 20.

intermittent: The charge pump starts and stops 20 seconds before, and after, the compressor in the heat pump.

speed during operation

heating, hot water, cooling

Setting range: auto / manual

Default value: auto

Manual setting

Setting range: 1–100 %

Default values: 70 %

speed in wait mode

Setting range: 1–100 %

Default values: 30 %

max. allowed speed

Setting range: 80–100 %

Default values: 100 %

Set the speed at which the charge pump is to operate in the present operating mode. Select "auto" if the speed of the charge pump is to be regulated automatically (factory setting) for optimal operation.

If "auto" is activated for heating operation, you can also make the setting "max. allowed speed" which restricts the heating medium pump and does not allow it to run at a higher speed than the set value.

For manual operation of the charge pump deactivate "auto" for the current operating mode and set the value to between 1 and 100 % (the previously set value for "max. allowed speed" no longer applies).

Speed in wait mode (only used if "auto" has been selected for "Operating mode") means the charge pump operates at the set speed during the time when neither compressor operation nor additional heat are required.

5.12 - COUNTRY

Select here where the product was installed. This allows access to country specific settings in your product.

Language settings can be made regardless of this selection.



Caution

This option locks after 24 hours, after restarting the display or program updating.

9 Service

Service actions



NOTE


Servicing should only be carried out by persons with the necessary expertise.

When replacing components on SMO 20 only replacement parts from NIBE may be used.

EMERGENCY MODE



NOTE

Switch (SF1) must not be put into mode "I" or  before the installation is filled with water. The compressor in the heat pump can be damaged.

Emergency mode is used in event of operational interference and in conjunction with service. Hot water is not produced in emergency mode.

Emergency mode is activated by setting switch (SF1) in mode "I". This means that:


- The status lamp illuminates yellow.
- The display is not lit and the control computer is not connected.
- Hot water is not produced.
- The compressor in the heat pump is switched off. Charge pump (EB101-GP12) is running.
- The heating medium pump is active.
- The emergency mode relay (K2) is active.

External additional heat is active if it is connected to the emergency mode relay (K2, terminal block X1). Ensure that the heating medium circulates through the external additional heat.



TEMPERATURE SENSOR DATA

Temperature (°C)	Resistance (kOhm)	Voltage (VDC)
-40	351.0	3.256
-35	251.6	3.240
-30	182.5	3.218
-25	133.8	3.189
-20	99.22	3.150
-15	74.32	3.105
-10	56.20	3.047
-5	42.89	2.976
0	33.02	2.889
5	25.61	2.789
10	20.02	2.673
15	15.77	2.541
20	12.51	2.399
25	10.00	2.245
30	8.045	2.083
35	6.514	1.916
40	5.306	1.752
45	4.348	1.587
50	3.583	1.426
55	2.968	1.278
60	2.467	1.136
65	2.068	1.007
70	1.739	0.891
75	1.469	0.785
80	1.246	0.691
85	1.061	0.607
90	0.908	0.533
95	0.779	0.469
100	0.672	0.414

USB SERVICE OUTLET

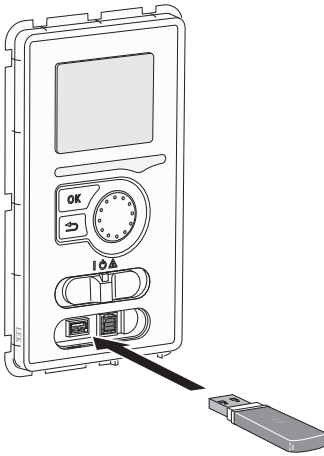


The display unit is equipped with a USB socket that can be used to update the software and save logged information in SMO 20.

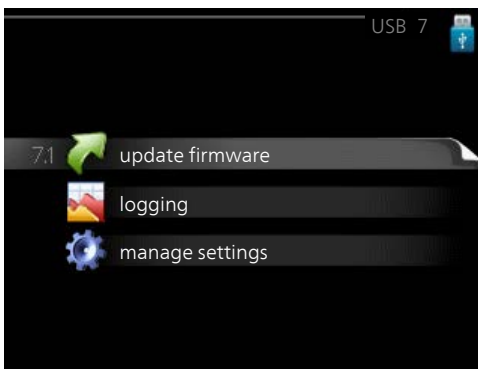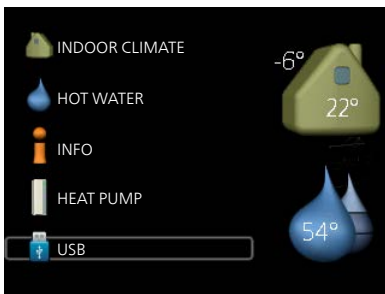

When a USB memory is connected, a new menu (menu 7) appears in the display.

Menu 7.1 - update firmware

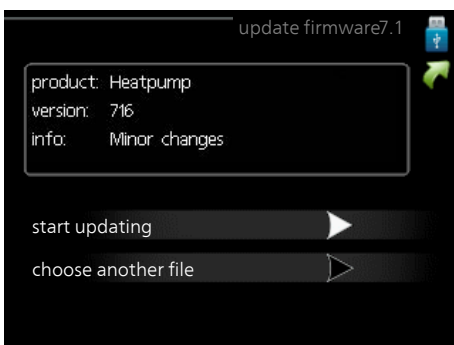

This allows you to update the software in SMO 20.



NOTE

For the following functions to work the USB memory must contain files with software for SMO 20 from NIBE.

The fact box at the top of the display shows information (always in English) of the most probable update that the update software has selected from the USB memory.

This information states the product for which the software is intended, the software version and general information about it. If you want a file other than the one selected, the correct file can be selected through "choose another file".

start updating

Select "start updating" if you want to start the update. You are asked whether you really want to update the software. Respond "yes" to continue or "no" to undo.

If you responded "yes" to the previous question the update starts and you can now follow the progress of the update on the display. When the update is complete SMO 20 restarts.



TIP


A software update does not reset the menu settings in SMO 20.



Caution


If the update is interrupted before it is complete (for example power cut etc.), the software can be reset to the previous version if the OK button is held in during start up until the green lamp starts to illuminate (takes about 10 seconds).

choose another file

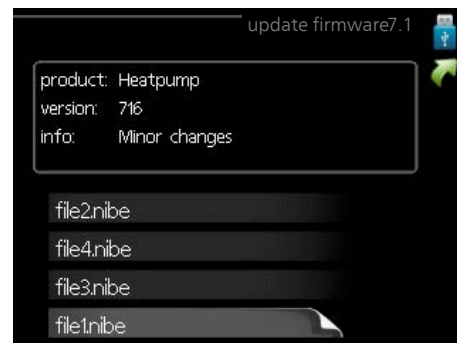

Select "choose another file" if you do not want to use the suggested software. When you scroll through the files, information about the marked software is shown in a fact box just as before. When you have selected a file with the OK button you will return to the previous page (menu 7.1) where you can choose to start the update.

Menu 7.2 - logging

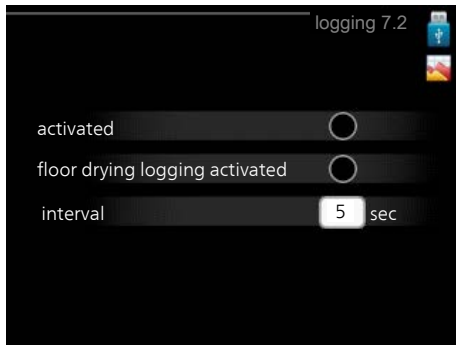

Setting range: 1 s – 60 min
Factory setting range: 5 s

Here you can choose how current measurement values from SMO 20 should be saved onto a log file on the USB memory.

1. Set the desired interval between loggings.
2. Tick "activated".
3. The present values from SMO 20 are saved in a file in the USB memory at the set interval until "activated" is unticked.



Caution

Untick "activated" before removing the USB memory.

Logging floor drying

Here you can save a floor drying log on the USB memory and in this way see when the concrete slab reached the correct temperature.


- Make sure that "floor drying function" is activated in menu 5.9.
- Select "logging floor drying activated".
- A log file is now created, where the temperature and the immersion heater output can be read off. Logging continues until "logging floor drying activated" is deselected or until "floor drying function" is stopped.



Caution

Deselect "logging floor drying activated" before you remove the USB memory.

Menu 7.3 - manage settings

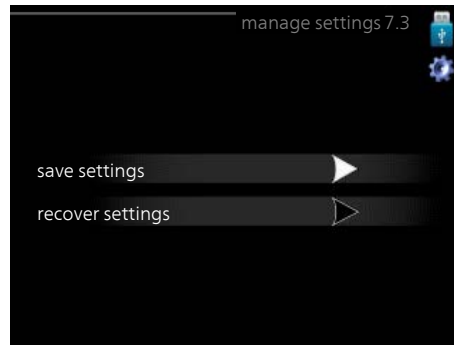

Here you can manage (save as or retrieve from) all the menu settings (user and service menus) in SMO 20 with a USB memory.

Via "save settings" you save the menu settings to the USB memory in order to restore them later or to copy the settings to another SMO 20.



Caution

When you save the menu settings to the USB memory you replace any previously saved settings on the USB memory.

Via "recover settings" you reset all menu settings from the USB memory.



Caution

Reset of the menu settings from the USB memory cannot be undone.


10 Disturbances in comfort

In most cases, SMO 20 notes a malfunction (a malfunction can lead to disruption in comfort) and indicates this with alarms, and instructions for action, in the display.

Info-menu

All the installation's measurement values are gathered under menu 3.1 in the control module's menu system. Examining the values in this menu can often make it easier to identify the source of the fault.

Manage alarm

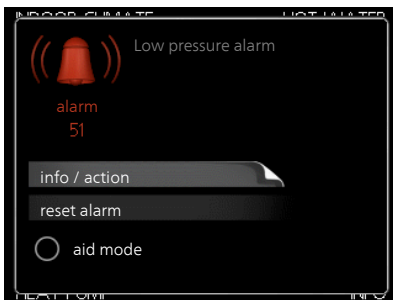

In the event of an alarm, some kind of malfunction has occurred, which is indicated by the status lamp changing from green continuously to red continuously. In addition, an alarm bell appears in the information window.

ALARM

In the event of an alarm with a red status lamp a malfunction has occurred that the heat pump and/or control module cannot remedy itself. In the display, by turning the control knob and pressing the OK button, you can see the type of alarm it is and reset it. You can also choose to set the installation to aid mode.

info / action Here you can read what the alarm means and receive tips on what you can do to correct the problem that caused the alarm.

reset alarm In many cases, it is sufficient to select "reset alarm" for the product to revert to normal operation. If a green light comes on after selecting "reset alarm", the alarm has been remedied. If the red light is still on, and a menu called "alarm" is visible in the display, the problem causing the alarm still remains.

aid mode "aid mode" is a type of emergency mode. This means that the installation produces heat and/or hot water even if there is some kind of problem. This could mean that the heat pump's compressor is not in operation. In this case, any electric additional heat produces heat and/or hot water.



Caution

To select aid mode an alarm action must be selected in the menu 5.1.4.



Caution

Selecting "aid mode" is not the same as correcting the problem that caused the alarm. The status lamp will therefore continue to be red.

If the operational interference is not shown in the display the following tips can be used:

BASIC ACTIONS

Start by checking the following items:

- The switch's (SF1) position.
- Group and main fuses of the accommodation.
- Miniature circuit breaker for SMO 20 (FA1).
- The property's earth circuit breaker.

LOW HOT WATER TEMPERATURE OR A LACK OF HOT WATER

This part of the fault-tracing chapter only applies if the water heater is installed in the system.

- Closed or choked filling valve for the hot water.
 - Open the valve.
- Mixing valve (if there is one installed) set too low.
 - Adjust the mixer valve.
- SMO 20 in incorrect operating mode.
 - Enter menu 4.2. If mode "auto" is selected, select a higher value on "stop additional heat" in menu 4.9.2.
 - If mode "manual" is selected, select "addition".
- Large hot water consumption.
 - Wait until the hot water has heated up. Temporarily increased hot water capacity (temporary lux) can be activated in menu 2.1.
- Too low hot water setting.
 - Enter menu 2.2 and select a higher comfort mode.
- Low hot water access with the "Smart Control" function active.
 - If the hot water usage has been low, the installation will produce less hot water than normal. Restart the installation
- Too low or no operating prioritisation of hot water.
 - Enter menu 4.9.1 and increase the time for when hot water is to be prioritised. Note that if the time for hot water is increased, the time for heating production is reduced, which can give lower/uneven room temperatures.
- "Holiday mode" activated in menu 4.7.
 - Enter menu 4.7 and select "Off".

LOW ROOM TEMPERATURE

- Closed thermostats in several rooms.
 - Set the thermostats to max, in as many rooms as possible. Adjust the room temperature via menu 1.1, instead of choking the thermostats.
- SMO 20 in incorrect operating mode.
 - Enter menu 4.2. If mode "auto" is selected, select a higher value on "stop heating" in menu 4.9.2.
 - If mode "manual" is selected, select "heating". If this is not enough, select "addition".
- Too low set value on the automatic heating control.
 - Enter menu 1.1 "temperature" and adjust the offset heating curve up. If the room temperature is only low in cold weather the curve slope in menu 1.9.1 "heating curve" needs adjusting up.

- Too low or no operating prioritisation of heat.
 - Enter menu 4.9.1 and increase the time for when heating is to be prioritised. Note that if the time for heating is increased the time for hot water production is reduced, which can give smaller amounts of hot water.
- "Holiday mode" activated in menu 4.7.
 - Enter menu 4.7 and select "Off".
- External switch for changing the room heating activated.
 - Check any external switches.
- Air in the climate system.
 - Vent the climate system.
- Closed valves to the climate system or heat pump.
 - Open the valves.

HIGH ROOM TEMPERATURE

- Too high set value on the automatic heating control.
 - Enter menu 1.1 (temperature) and reduce the offset heating curve. If the room temperature is only high in cold weather the curve slope in menu 1.9.1 "heating curve" needs adjusting down.
- External switch for changing the room heating activated.
 - Check any external switches.

LOW SYSTEM PRESSURE

- Not enough water in the climate system.
 - Fill the climate system with water and check for leaks. In event of repeated filling, contact the installer.

THE AIR/WATER HEAT PUMP'S COMPRESSOR DOES NOT START

- There is no heating requirement.
 - SMO 20 does not call on heating or hot water.
- Compressor blocked due to the temperature conditions.
 - Wait until the temperature is within the product's working range.
- Minimum time between compressor starts has not been reached.
 - Wait for at least 30 minutes and then check if the compressor has started.
- Alarm tripped.
 - Follow the display instructions.

Additional heating only

If you are unsuccessful in rectifying the fault and are unable to heat the house, you can, whilst waiting for assistance, continue running the heat pump in "add. heat only". This means that additional heating only is used to heat the house.

SET THE INSTALLATION TO ADDITIONAL HEAT MODE

1. Go to menu 4.2 op. mode.
2. Mark "add. heat only" using the control knob and then press the OK button.
3. Return to the main menus by pressing the Back button.



Caution

When commissioning without NIBE air/water heat pump, the "communication error" alarm may appear in the display.

The alarm is reset if the relevant air/water heat pump is deactivated in menu 5.2.2 ("installed heat pump").

11 Accessories

Not all accessories are available on all markets.

AUXILIARY RELAY HR 10

Auxiliary relay HR 10 is used to control external 1 to 3 phase loads such as oil burners, immersion heaters and pumps.

Part no 067 309

CHARGE PUMP CPD 11

Charge pump for heat pump

CPD 11-25/65 *CPD 11-25/75*

Part no. 067 321

Part no. 067 320

COMMUNICATION MODULE FOR SOLAR ELECTRICITY EME 20

EME 20 is used to enable communication and control between inverters for solar cells from NIBE and SMO 20.

Part no. 057 188

CONNECTION BOX K11

Connection box with thermostat and overheating protection. (When connecting Immersion heater IU)

Part no. 018 893

EXTERNAL ELECTRIC ADDITIONAL HEAT ELK

ELK 5

Immersion heater

5 kW, 1 x 230 V

Part no. 069 025

ELK 15

15 kW, 3 x 400 V

Part no. 069 022

ELK 213

7-13 kW, 3 x 400 V

Part no. 069 500

ELK 8

Immersion heater

8 kW, 1 x 230 V

Part no. 069 026

ELK 26

26 kW, 3 x 400 V

Part no. 067 074

HOT WATER CONTROL

VST 05

Reversing valve, Cu pipe Ø22 mm

Max. heat pump size 8 kW

Part no. 089 982

VST 11

Reversing valve, Cu pipe Ø28 mm

Max. recommended power, 17 kW

Part no. 089 152

VST 20

Reversing valve, Cu pipe Ø35 mm

(Max. recommended capacity, 40 kW)

Part no 089 388

IMMERSION HEATER IU

3 kW

Part no. 018 084

6 kW

Part no. 018 088

9 kW

Part no. 018 090

REVERSING VALVE FOR COOLING

VCC 05

Reversing valve, Cu pipe Ø22 mm

Part no. 067 311

VCC 11

Reversing valve, Cu pipe Ø28 mm

Part no. 067 312

ROOM SENSORRTS 40

This accessory is used to obtain a more even indoor temperature.

Part no. 067 065

WATER HEATER/ACCUMULATOR TANK

AHPS

Accumulator tank without an immersion heater with solar coil (copper) and a hot water coil (stainless steel).

Part no. 056 283

AHPH

Accumulator tank without an immersion heater with integrated hot water coil (stainless steel).

Part no. 081 036

VPA

Water heater with double-jacketed vessel.

VPA 450/300

Copper Part no. 088 660

Enamel Part no. 088 670

VPB

Water heater without immersion heater with charging coil.

VPB 200

Copper Part no. 088 515

Enamel Part no. 088 517

Stainless steel Part no. 088 518

VPB 300

Copper Part no. 083 009

Enamel Part no. 083 011

Stainless steel Part no. 083 010

VPB 500

Copper Part no. 083 220

VPB 750-2

Copper Part no. 083 231

VPB 1000

Copper Part no. 083 240

VPAS

Water heater with double-jacketed vessel and solar coil.


VPAS 300/450

Copper Part no. 087 720

Enamel Part no. 087 710

12 Technical data

Dimensions

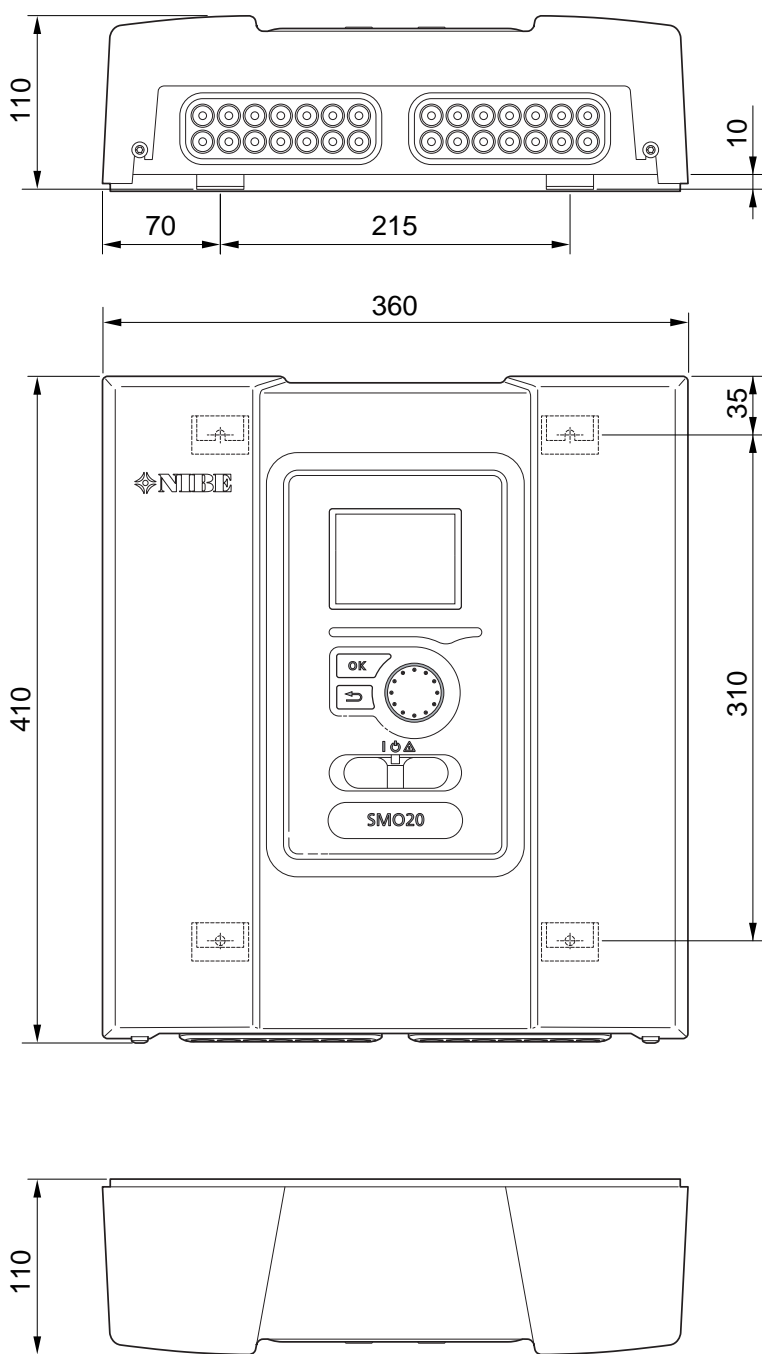


Technical specifications

<i>SMO 20</i>		
<i>Electrical data</i>		
Supply voltage		230V~ 50Hz
Enclosure class		IP21
Rated value for impulse voltage	kV	4
Pollution degree		2
Fuse	A	10
<i>Optional connections</i>		
Max number air/water heat pumps		1
Max number of sensors		8
Max number of charge pumps		1
Max number of outputs for additional heat step		3
<i>Miscellaneous</i>		
Operation mode (EN60730)		Type 1
Area of operation	°C	-25 – 70
Ambient temperature	°C	5 – 35
Program cycles, hours		1, 24
Program cycles, days		1, 2, 5, 7
Resolution, program	min.	1
<i>Dimensions and weight</i>		
Width	mm	360
Depth	mm	110
Height	mm	410
Weight, (without packaging and enclosed components)	kg	4.3
<i>Miscellaneous</i>		
Part no. SMO 20		067 224


Energy labelling

<i>Supplier</i>		<i>NIBE</i>
<i>Model</i>		<i>SMO 20 + F2040 / F2120</i>
Controller, class		II
Controller, contribution to efficiency	%	2.0


Electrical circuit diagram

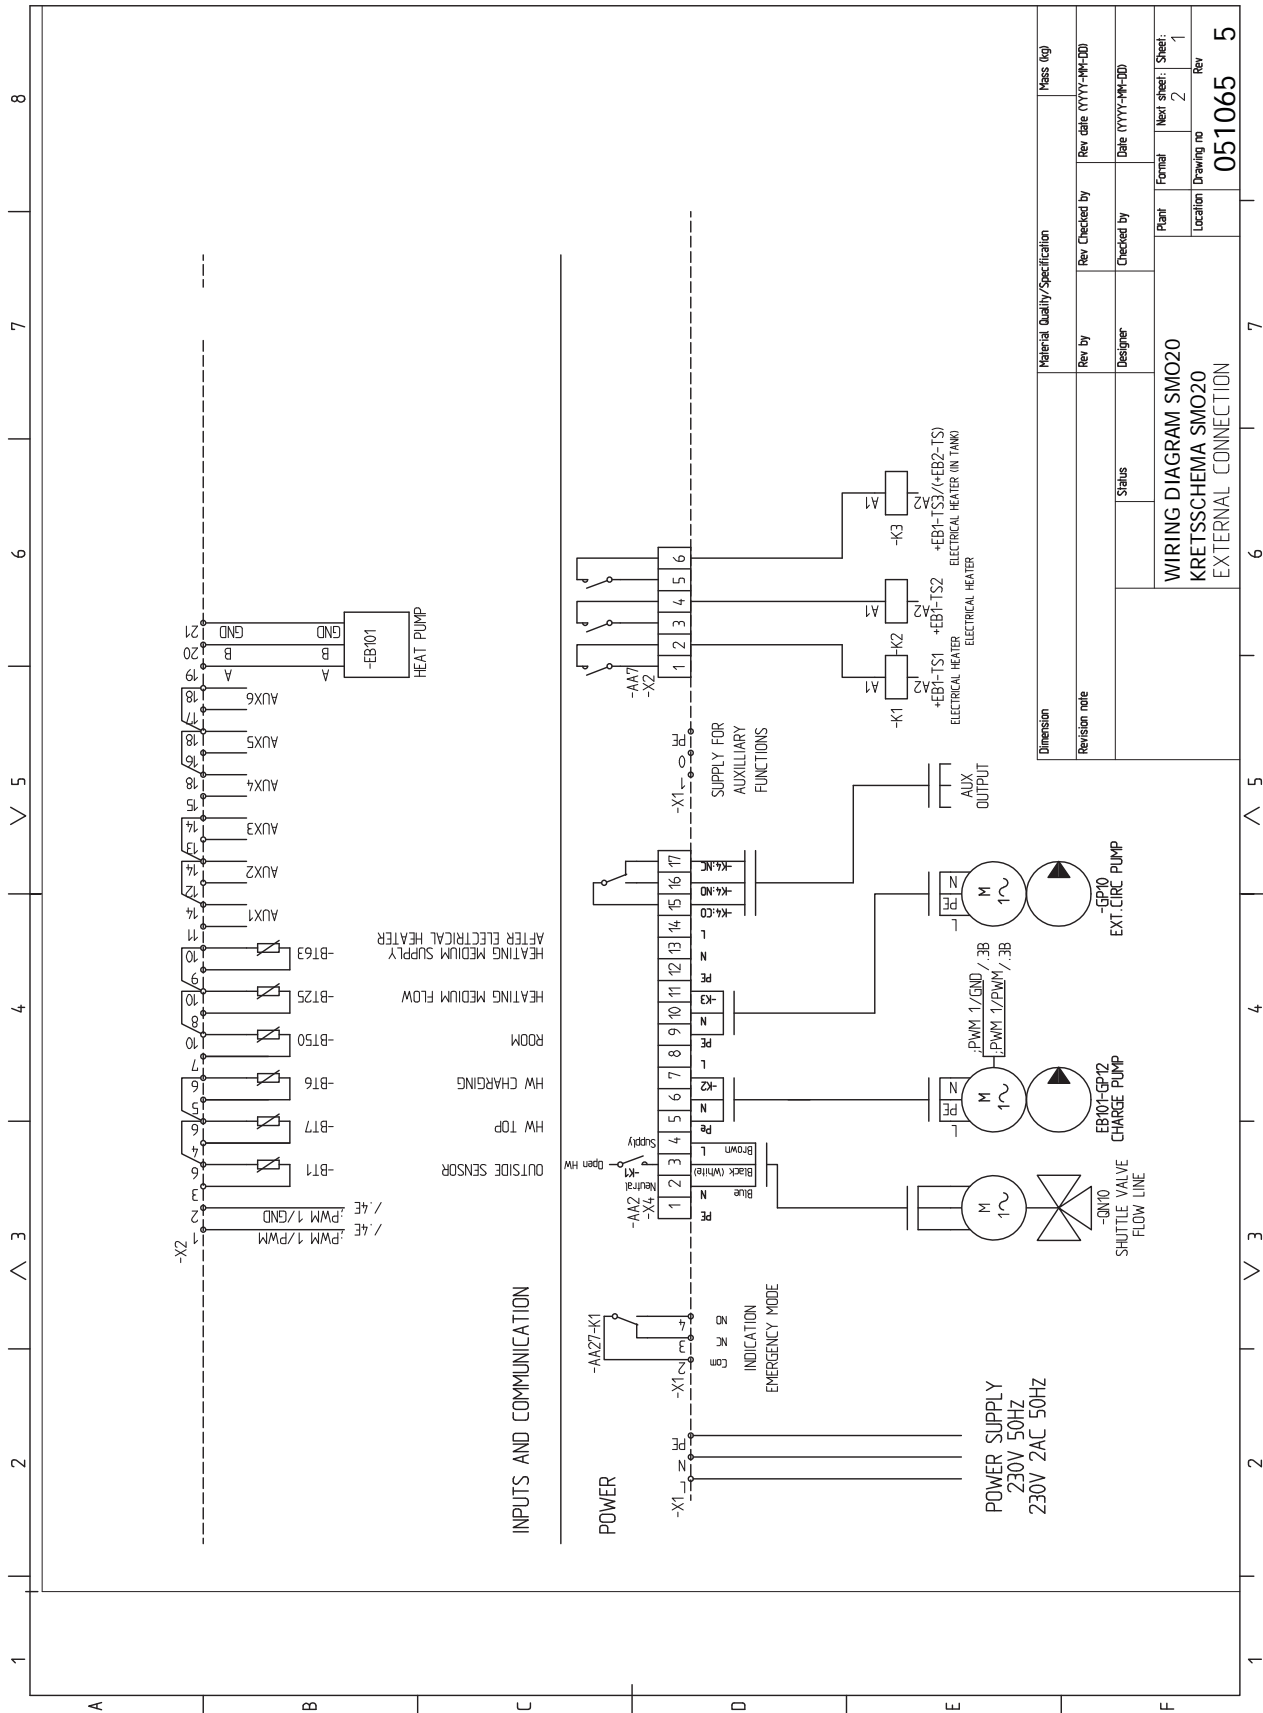

Material Quality/Specification	Miss (kg)
Revision rate	Rev. date (YYYY-MM-DD)
Rev. by	Rev. Checked by
Designer	Checked by
Status	Date (YYYY-MM-DD)
Plant	Formal
Location	Next sheet: Sheet:
051065	2
EXTERNAL CONNECTION	Drawing no
	Rev
	1

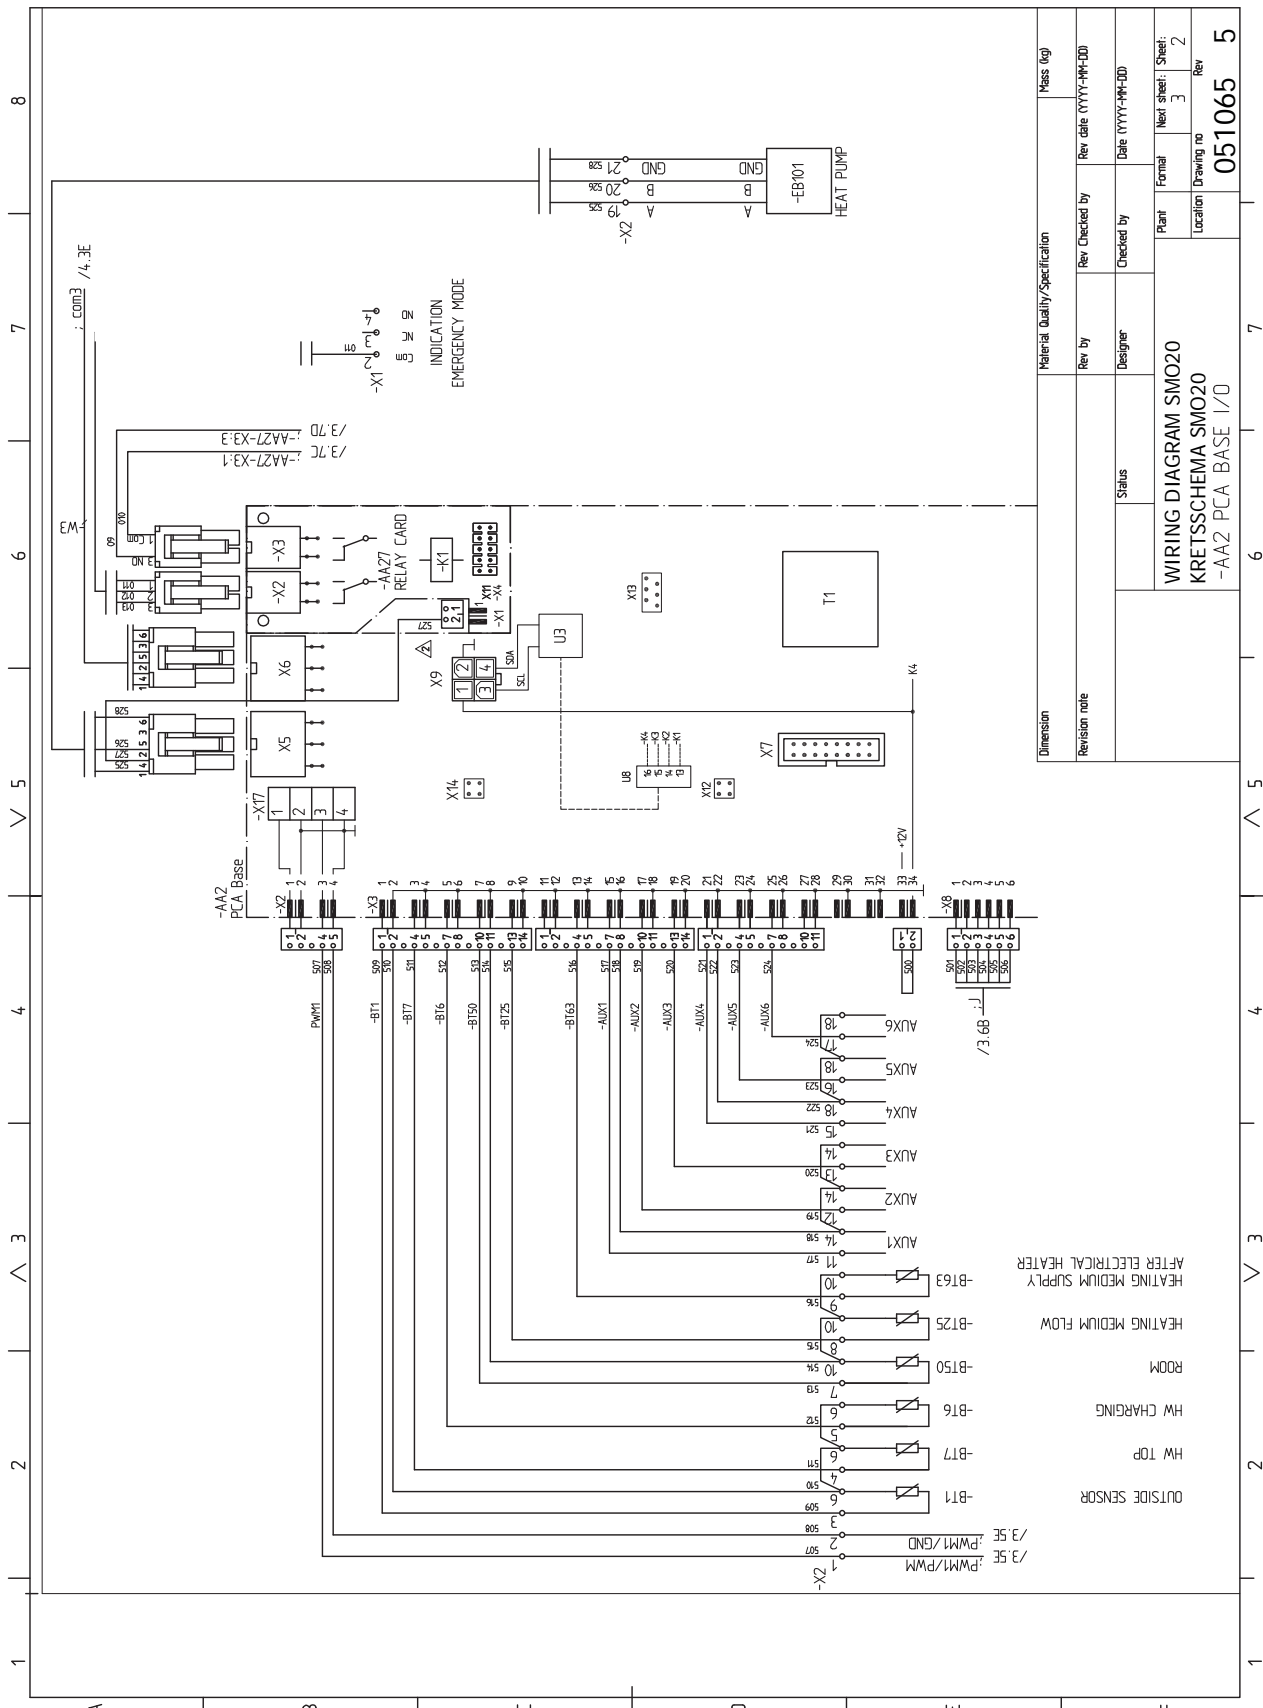


Material Quality/Specification		Miss (kg)	
Revision rate	Rev by	Rev Checked by	Rev date (YYYY-MM-DD)
Dimension	Status	Checked by	Date (YYYY-MM-DD)
WIRING DIAGRAM SMO20		Plant	Next sheet: Sheet: 2
KRETSCHEMA SMO20		Location	Drawing no
-AA2 PCA BASE I/O		051065	

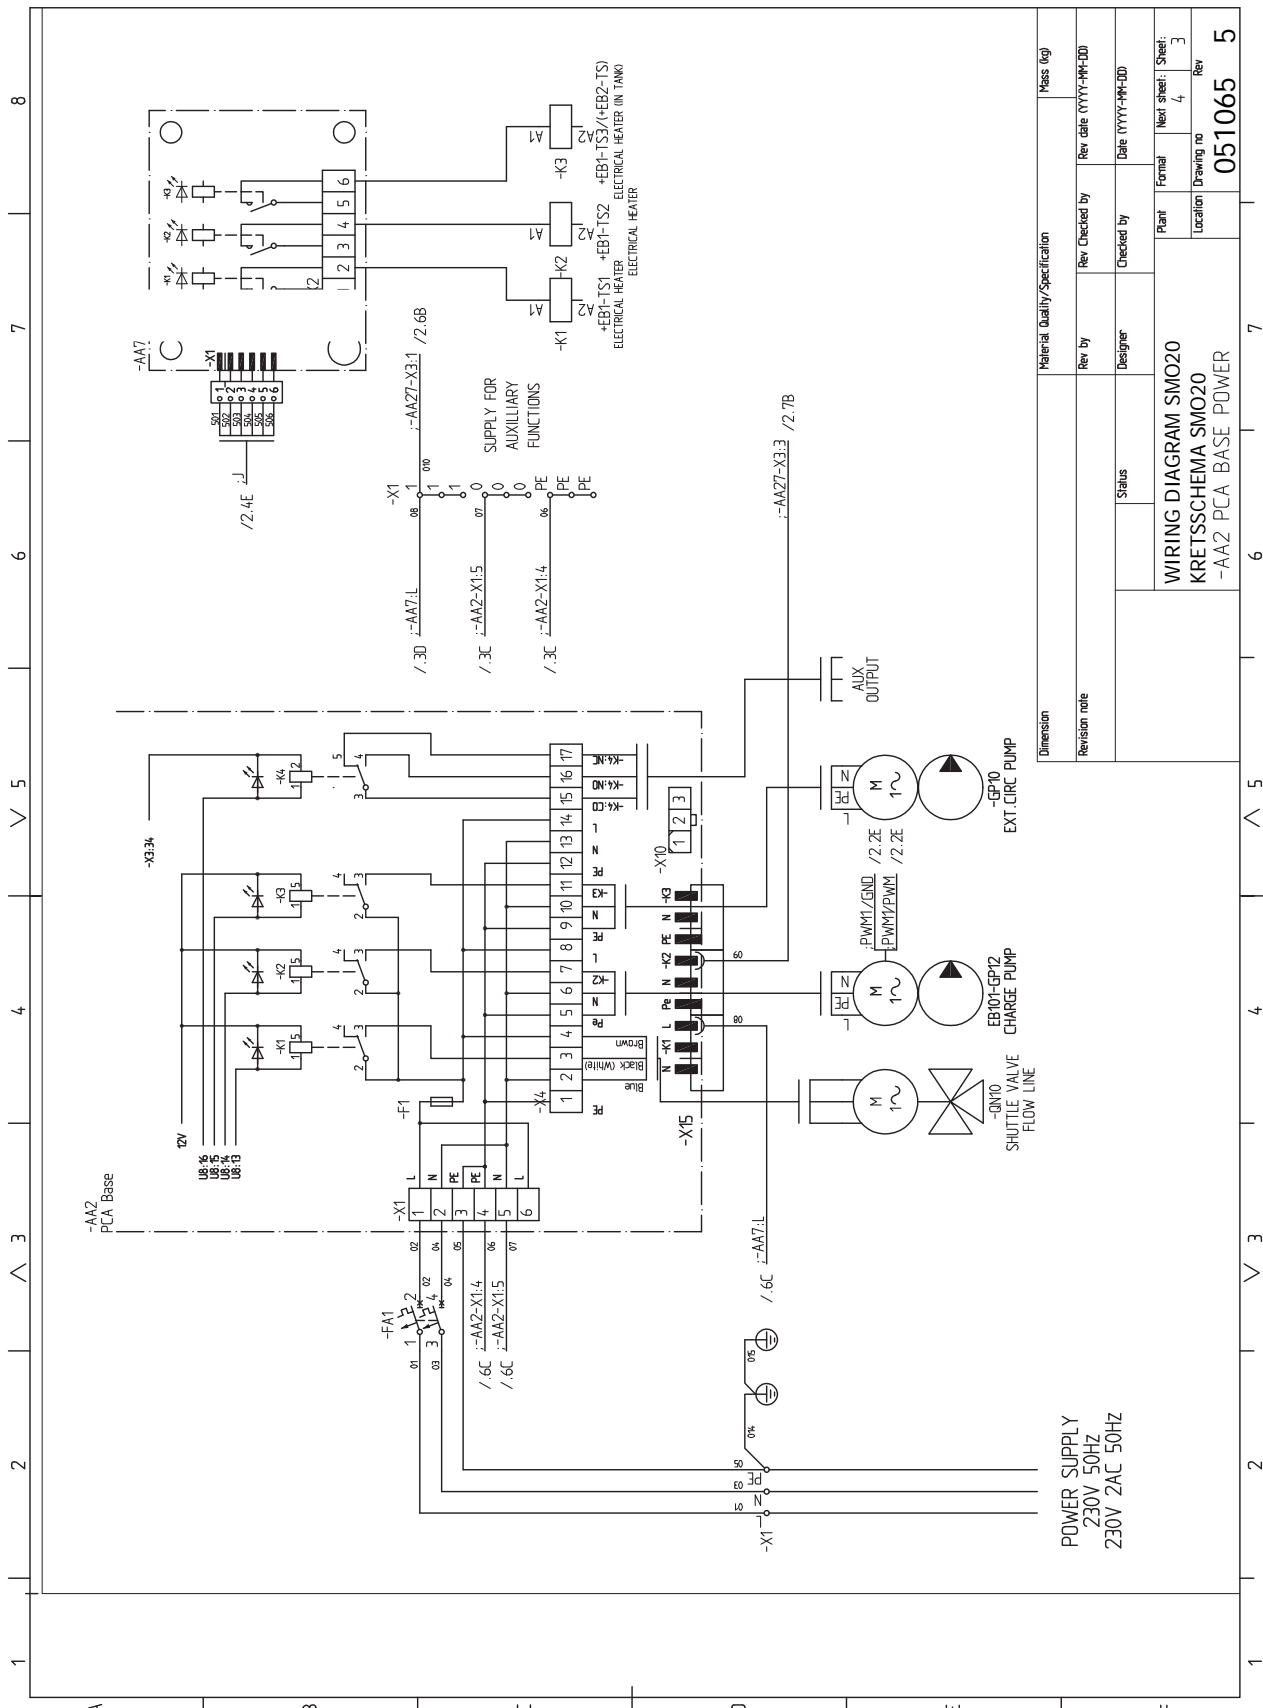


POWER SUPPLY
230V 50HZ
230V 2AC 50HZ

Material Quality/Specification		Mess (kg)	
Revision note	Rev. by	Rev. Checked by	Rev. date (YYYY-MM-DD)
Status	Designer	Checked by	Date (YYYY-MM-DD)
WIRING DIAGRAM SMO20 KRETSCHEMA SMO20 -AA2 PCA BASE POWER		Plant	Formal
		Location	Next sheet / Sheet:
		Drawing no	4 / 3
		Rev	
		051065	
		5	

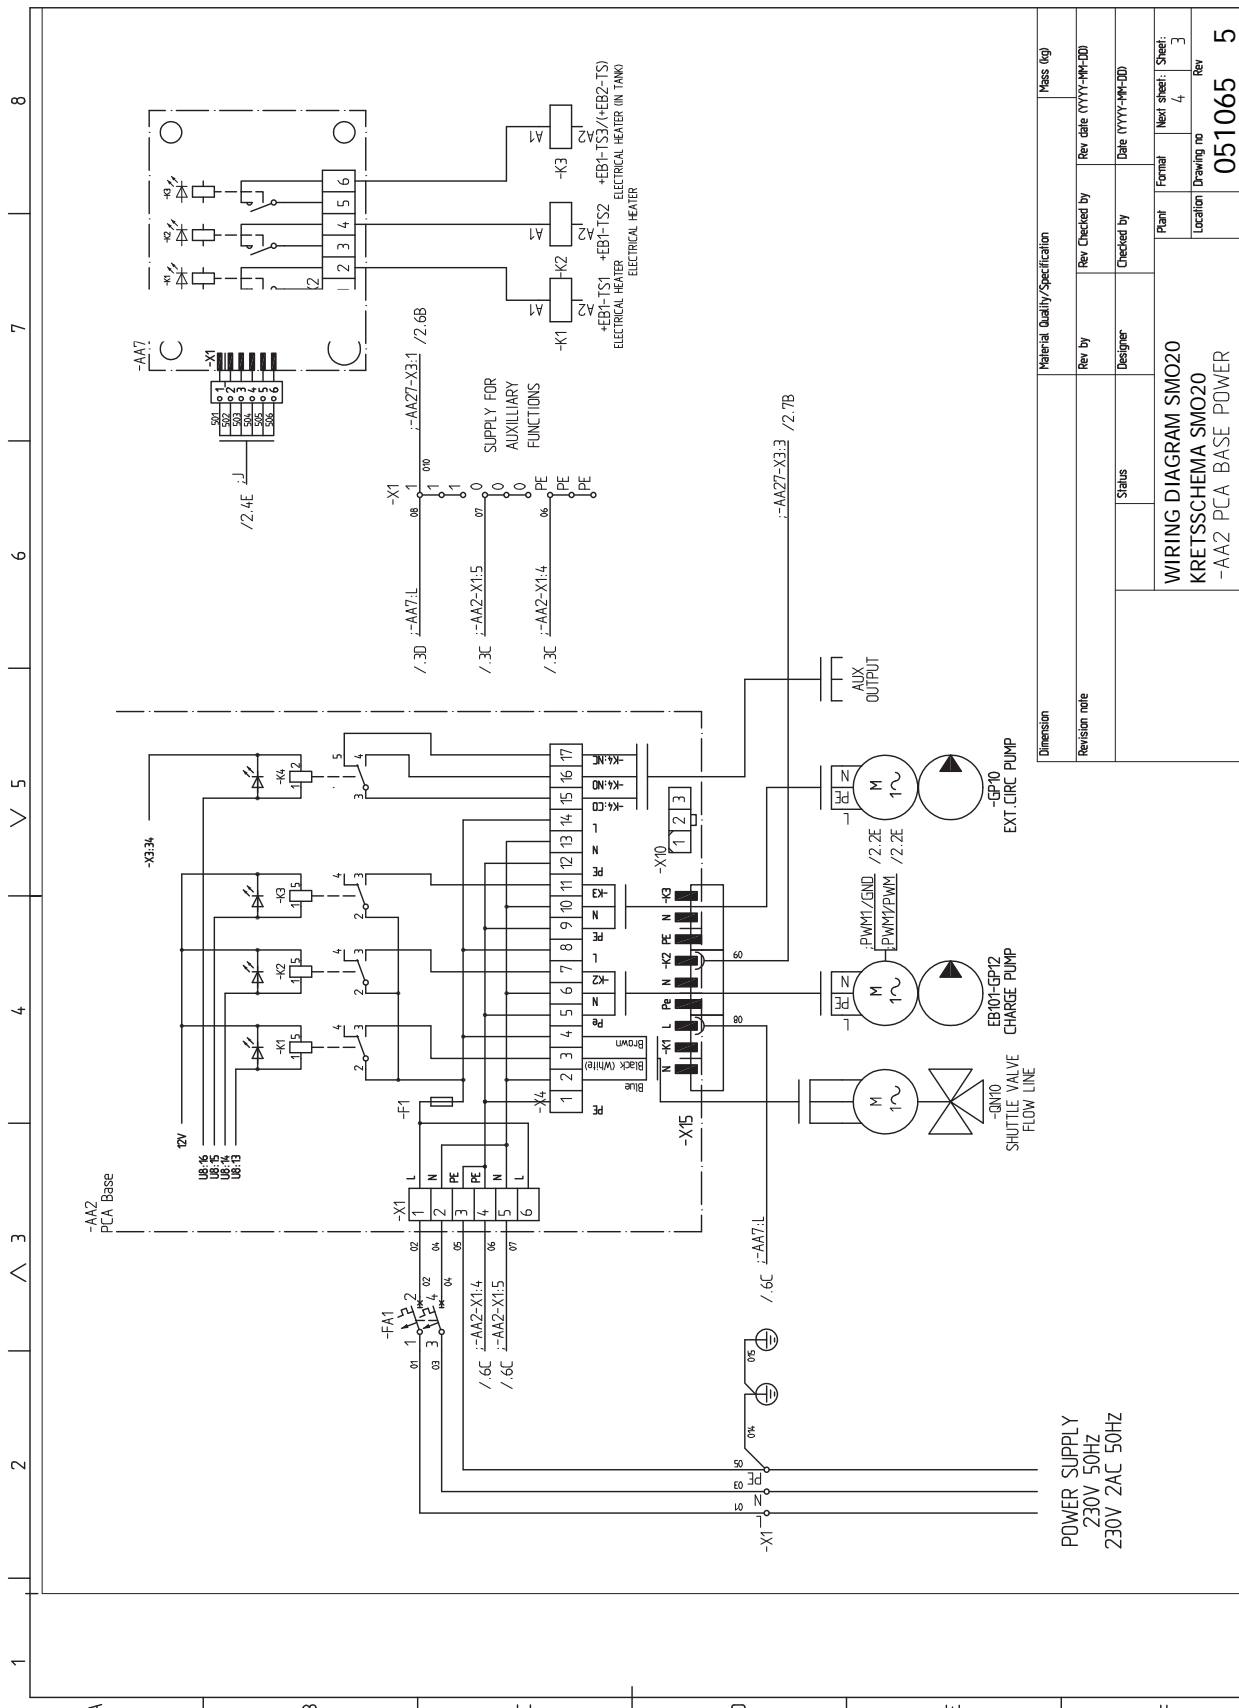

POWER SUPPLY
230V 50HZ
230V 2AC 50HZ

Material Quality/Specification		Miss (kg)	
Revision note	Rev. by	Rev. Checked by	Rev. date (YYYY-MM-DD)
Dimension	Status	Checked by	Date (YYYY-MM-DD)
WIRING DIAGRAM SMO20		Plant	Next sheet / Sheet:
KRETSCHEMA SMO20		Location	Drawing no
-AA2 PCA BASE POWER			Rev
		051065	
		5	

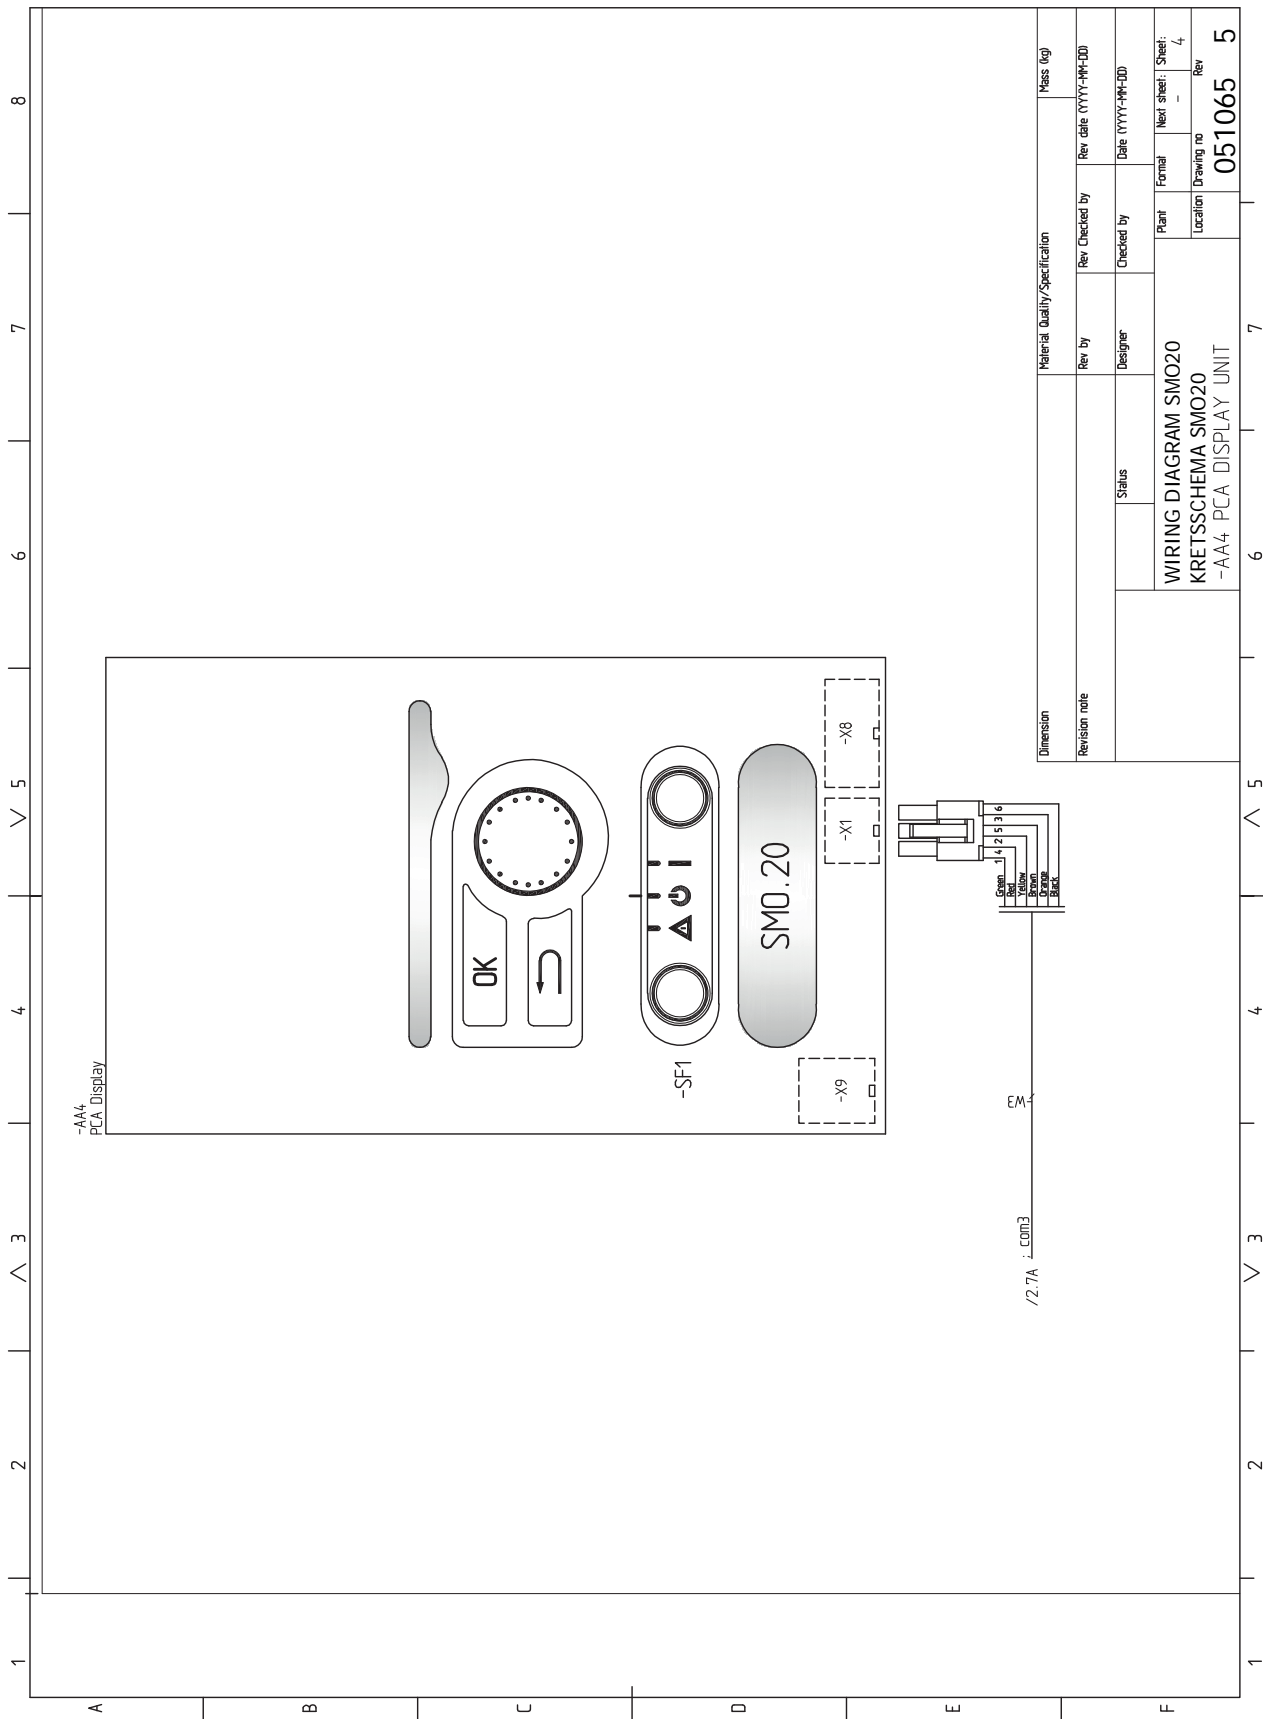

Item register

- A**
 - Accessibility, electrical connection, 18
 - Accessories, 49
 - Alarm, 46
- B**
 - Back button, 31
- C**
 - Cable lock, 19
 - Commissioning and adjusting, 29
 - Commissioning with additional heating only, 29
 - Commissioning with NIBE air/water heat pump, 29
 - Cooling mode, 29
 - Preparations, 29
 - Start guide, 30
 - Commissioning with additional heating only, 29
 - Commissioning with NIBE air/water heat pump, 29
 - Communication with heat pump, 21
 - Connecting accessories, 28
 - Connecting the charge pump for the heat pump, 20
 - Connections, 20
 - Control, 31, 35
 - Control - Introduction, 31
 - Control - Menus, 35
 - Control - Introduction, 31
 - Display unit, 31
 - Menu system, 32
 - Control knob, 31
 - Control - Menus, 35
 - Menu 5 - SERVICE, 38
 - Cooling mode, 29
 - Cooling mode indication, 26
- D**
 - Delivery and handling, 9
 - Mounting, 9
 - Supplied components, 9
 - Dimensions and setting-out coordinates, 51
 - Display, 31
 - Display unit, 31
 - Back button, 31
 - Control knob, 31
 - Display, 31
 - OK button, 31
 - Status lamp, 31
 - Switch, 31
 - Disturbances in comfort, 46
 - Alarm, 46
 - Manage alarm, 46
 - Only additional heat, 48
 - Troubleshooting, 46
 - Docking alternatives, 13
- E**
 - Electrical circuit diagram, 54
 - Electrical connections, 17
 - Accessibility, electrical connection, 18
 - Cable lock, 19
 - Communication with heat pump, 21
 - Connecting accessories, 28
 - Connecting the charge pump for the heat pump, 20
 - Connections, 20
 - External circulation pump, 25
 - External connection options (AUX), 25
 - General, 17
 - Miniature circuit-breaker, 17
 - NIBE Uplink, 25
 - Optional connections, 24
 - Outdoor sensor, 22
 - Power connection, 20
 - Relay output for emergency mode, 24
 - Reversing valve, 25
 - Room sensor, 22
 - Step controlled additional heat, 24
 - Temperature sensor, external flow line, 23
 - Temperature sensor, external supply line after electric heater, 23
 - Temperature sensor, hot water charging, 23
 - Energy labelling, 53
 - External circulation pump, 25
 - External connection options
 - Possible selections for AUX output, 26
 - Temperature sensor, hot water top, 23
 - External connection options (AUX), 25
 - Cooling mode indication, 26
 - Extra circulation pump, 26
 - Hot water circulation, 26
 - Optional selection for AUX output (potential-free variable relay), 26
 - Extra circulation pump, 26
- H**
 - Help menu, 30, 34
 - Hot water circulation, 26

- I**
- Important information, 4
 - Inspection of the installation, 6
 - Marking, 4
 - Recovery, 5
 - Safety information, 4
 - Serial number, 5
 - Symbols, 4
 - System solutions, 7
- Inspection of the installation, 6
- M**
- Manage alarm, 46
- Marking, 4
- Menu 5 - SERVICE, 38
- Menu system, 32
 - Help menu, 30, 34
 - Operation, 33
 - Scroll through the windows, 34
 - Selecting menu, 33
 - Selecting options, 33
 - Setting a value, 33
 - Use the virtual keyboard, 34
- Miniature circuit-breaker, 17
- Mounting, 9
- N**
- NIBE Uplink, 25
- O**
- OK button, 31
- Only additional heat, 48
- Operation, 33
- Optional connections, 24
 - Possible selections for AUX inputs, 25
- Outdoor sensor, 22
- P**
- Pipe connections, 11
 - Docking alternatives, 13
 - General, 11
 - Symbol key, 12
- Possible selection for AUX inputs, 25
- Possible selection for AUX output (potential free variable relay), 26
- Possible selections for AUX output, 26
- Power connection, 20
- Preparations, 29
- R**
- Recovery, 5
- Relay output for emergency mode, 24
- Reversing valve, 25
- Room sensor, 22
- S**
- Safety information, 4
 - Marking, 4
 - Serial number, 5
 - Symbols on SMO 20, 4
- Scroll through the windows, 34
- Selecting menu, 33
 - Selecting options, 33
- Serial number, 5
- Service, 43
 - Service actions, 43
- Service actions, 43
 - Standby mode, 43
 - Temperature sensor data, 43
 - USB service outlet, 44
- Setting a value, 33
- Standby mode, 43
- Start guide, 30
- Status lamp, 31
- Step controlled additional heat, 24
- Supplied components, 9
- Switch, 31
- Symbol key, 12
- Symbols, 4
- Symbols on SMO 20, 4
- System solutions, 7
- T**
- Technical data, 51
 - Dimensions and setting-out coordinates, 51
 - Electrical circuit diagram, 54
- Temperature sensor, external flow line, 23
- Temperature sensor, external supply line after electric heater, 23
- Temperature sensor, hot water charging, 23
- Temperature sensor, hot water top, 23
- Temperature sensor data, 43
- The Control Module Design, 10
 - Component locations, 10
 - List of components, 10
- Troubleshooting, 46
- U**
- USB service outlet, 44
- Use the virtual keyboard, 34

Contact information

AUSTRIA

KNV Energietechnik GmbH
Gahberggasse 11, 4861 Schörfling
Tel: +43 (0)7662 8963-0
mail@knv.at
knv.at

CZECH REPUBLIC

Družstevní závody Dražice - strojírna
s.r.o.
Dražice 69, 29471 Benátky n. Jiz.
Tel: +420 326 373 801
nibe@nibe.cz
nibe.cz

DENMARK

Vølund Varmeteknik A/S
Industrivej Nord 7B, 7400 Herning
Tel: +45 97 17 20 33
info@volundvt.dk
volundvt.dk

FINLAND

NIBE Energy Systems Oy
Juurakotie 3, 01510 Vantaa
Tel: +358 (0)9 274 6970
info@nibe.fi
nibe.fi

FRANCE

NIBE Energy Systems France SAS
Zone industrielle RD 28
Rue du Pou du Ciel, 01600 Reyrieux
Tél: 04 74 00 92 92
info@nibe.fr
nibe.fr

GERMANY

NIBE Systemtechnik GmbH
Am Reiherpfahl 3, 29223 Celle
Tel: +49 (0)5141 75 46 -0
info@nibe.de
nibe.de

GREAT BRITAIN

NIBE Energy Systems Ltd
3C Broom Business Park,
Bridge Way, S41 9QG Chesterfield
Tel: +44 (0)845 095 1200
info@nibe.co.uk
nibe.co.uk

NETHERLANDS

NIBE Energietechnik B.V.
Energieweg 31, 4906 CG Oosterhout
Tel: +31 (0)168 47 77 22
info@nibenl.nl
nibenl.nl

NORWAY

ABK AS
Brobekkveien 80, 0582 Oslo
Tel: (+47) 23 17 05 20
post@abkklima.no
nibe.no

POLAND

NIBE-BIAWAR Sp. z o.o.
Al. Jana Pawla II 57, 15-703 Białystok
Tel: +48 (0)85 66 28 490
biawar.com.pl

RUSSIA

EVAN
bld. 8, Yuliusa Fuchika str.
603024 Nizhny Novgorod
Tel: +7 831 419 57 06
kuzmin@evan.ru
nibe-evan.ru

SWEDEN

NIBE Energy Systems
Box 14
Hannabadvägen 5, 285 21 Markaryd
Tel: +46 (0)433-27 3000
info@nibe.se
nibe.se

SWITZERLAND

NIBE Wärmetechnik c/o ait Schweiz
AG
Industriepark, CH-6246 Altishofen
Tel. +41 (0)58 252 21 00
info@nibe.ch
nibe.ch

For countries not mentioned in this list, contact NIBE Sweden or check nibe.eu for more information.

NIBE Energy Systems
Hannabadsvägen 5
Box 14
SE-285 21 Markaryd
info@nibe.se
nibe.eu

IHB EN 1918-8 231758

This manual is a publication from NIBE Energy Systems. All product illustrations, facts and data are based on the available information at the time of the publication's approval. NIBE Energy Systems makes reservations for any factual or printing errors in this manual.

©2019 NIBE ENERGY SYSTEMS

